


These instructions remain the property of Rhinorack Australia Pty Ltd and may not be used or changed for any other purpose than intended.



Rhino Pioneer SXB

Parts List

			Quantity			
ltem	Component Name	Part No.	44100B	44101B	44102B	44103B
1	Pioneer Tray Assembly	-	1	1	1	1
2	Crossbar	A490/A491	2	2	2	2
3	Pioneer SXB Endcap	M562	4	4	4	4
4	PVC Insert - 200mm	R034	4	4	4	4
5	AT Locking Tab	M136	6	8	6	8
6	AT Locking Tab Knob	M137	6	8	6	8
7	M6 x 12mm Cap Screw	B188	4	4	4	4
8	M6 Spring Washer	W004	4	4	4	4
9	M6 x 16mm Flat Washer	W031	4	4	4	4
10	Plate Nut	N057	4	4	4	4
11	Rubber Buffer Strip - 125mm	R011	4	4	4	4
12	Fitting Instructions	R074	1	1	1	1

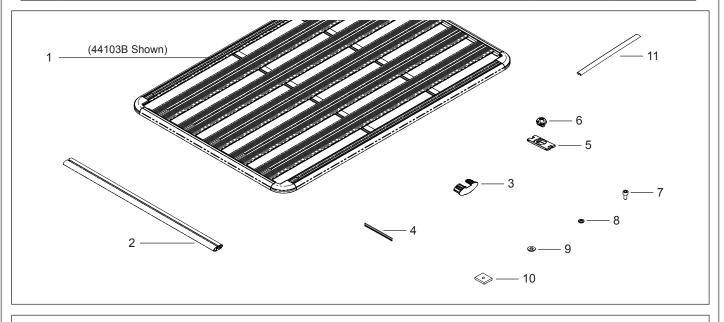

Tools Required: Electric Drill, Tape Measure, Pilot Drill (eg. 3mm), 8mm Drill Bit, Stanley Knife or Cutters, Rubber Mallet, 5mm Security Allen Key (provided in kit)

Maximum carrying capacity: Refer vehicle manufacturer specifications, less weight of alloy tray below (includes leg kits): (44100B = 19.5kg, 44101B = 22.5kg, 44102B = 25kg, 44103B = 29.5kg)

Recommendations:

It is essential that all bolt connections be checked after driving a short distance when you first install your cross bars. Bolt connections should be checked again at regular intervals (probably once a week is enough, depending on road conditions, usage, loads and distances travelled). You should also check the alloy tray each time it is re-fitted. Make sure to fasten your load securely. Please ensure that all loads are evenly distributed and that the centre of gravity is kept as low as possible.

Sensitivity to cross winds, behaviour in curves and braking.

The handling characteristics of the vehicle, changes when you transport a load on the roof. For safety reasons, we recommend you exercise extreme care when transporting wind-resisting loads; special consideration must be taken into account when braking.

Load Ratings:

Maximum permissible load is set by the vehicle manufacturer less the weight of trays above (weights above include leg kits). When alloy trays are to be used in off-road conditions, please build a safety factor of 1.5 into this load limit. Although the alloy trays are tested and approved to AS1235-2000, Australian road conditions can be much more rigorous. However, increasing the number of mount points to the vehicle does not increase the vehicles maximum permissible roof loading.



1 Measure and Drill Sides of Alloy Tray

Place the Pioneer alloy tray upside down in your work area. It may be advisable to sit the tray on top of the packing box to protect the tray from scratches.

Refer to **Appendix A** for the appropriate measurements to suit your vehicle and tray size.

Measure and mark the 4 drill locations on both sides of the Alloy Tray. Drill with a pilot hole and then drill an Ø8mm hole using a drill stop (as shown below).

