




Mountain Top Roll  
Installation Instructions

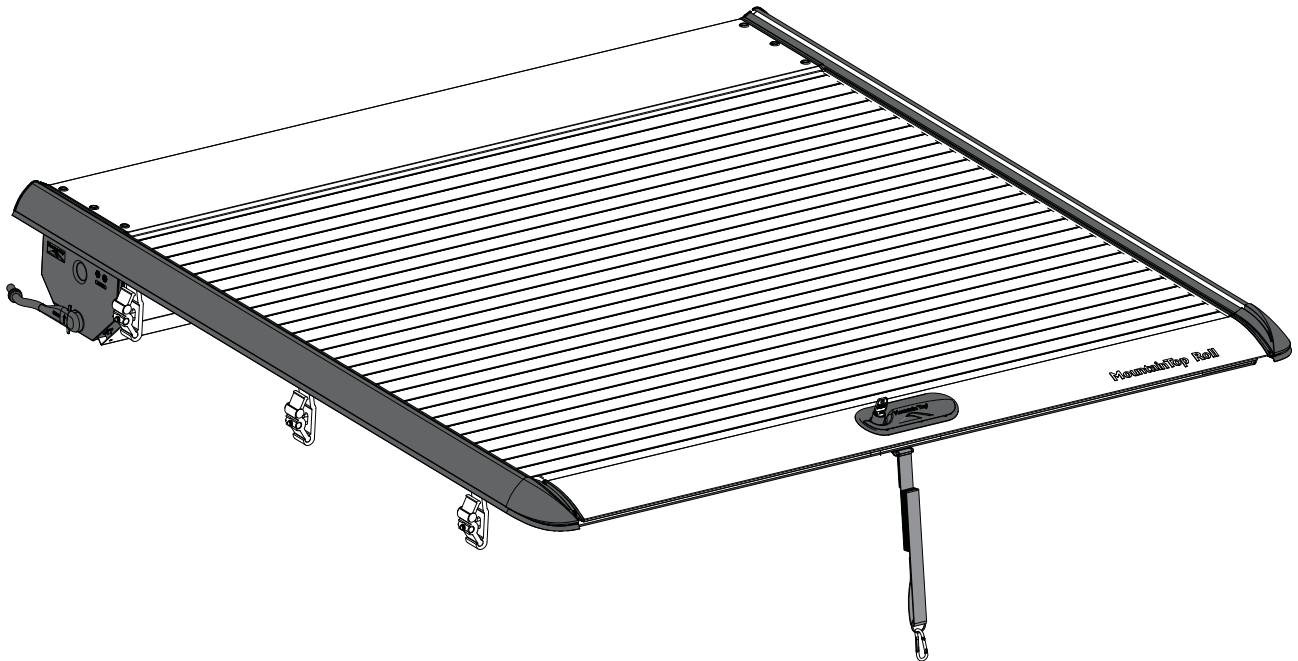

Model Year:	TOYOTA FORD ISUZU	2005 T/D: 2011 T/D 2012 T/D
Part Number:	MTR TO80 A01 MTR TO81 A01 MTR FO90 A01 MTR FO91 A01 MTR IS90 A01 MTR IS90 S01 MTR IS91 A01 MTR VW80 A01	Double cab Extra cab Double cab Suber cab Double cab Double cab (black) Space cab Double cab

Video Installation intruction



Weight: 31 / 36 kg.





































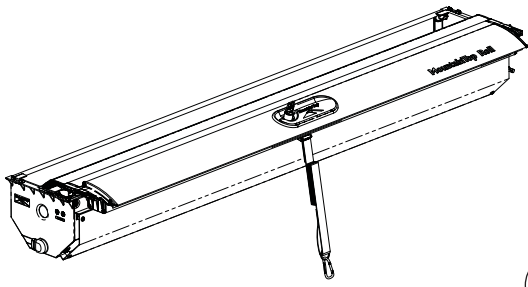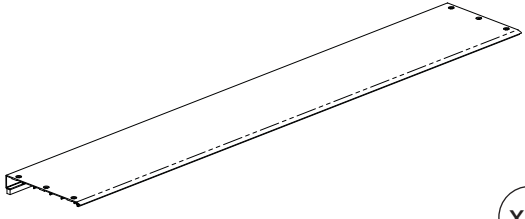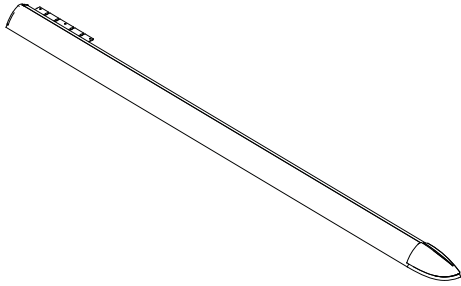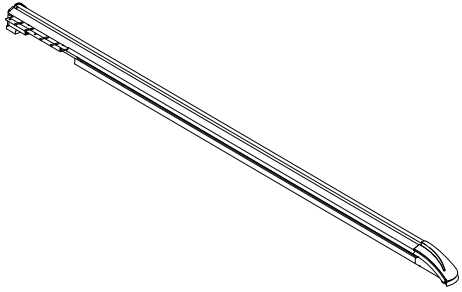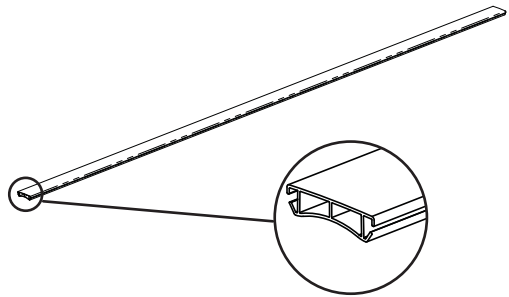



























Installation Time: 1 hr.



<http://youtu.be/2yM2hbplCdg>











Mountain Top Roll  
Installation Instructions



 <p><b>A</b></p> <p>x 1</p>	 <p><b>B</b></p> <p>x 1</p>																							
 <p><b>C</b></p> <p>x 1</p>	 <p><b>D</b></p> <p>x 1</p>																							
 <p><b>E</b></p> <p>x 1</p>																								
<table border="1"> <tr> <td data-bbox="167 1400 295 1556">  <p>Kit</p> </td> <td data-bbox="311 1355 486 1545">  <p><b>Q</b></p> <p>x 6</p> </td> <td data-bbox="502 1355 678 1545">  <p><b>R</b></p> <p>x 6</p> </td> <td data-bbox="694 1355 869 1545">  <p><b>S</b></p> <p>x 6</p> </td> <td data-bbox="885 1355 1061 1545">  <p><b>P</b></p> <p>x 12</p> </td> <td data-bbox="1077 1355 1252 1545">  <p><b>V</b></p> <p>x 6</p> </td> <td data-bbox="1268 1355 1444 1545">  <p><b>T</b></p> <p>Ø6</p> <p>x 6</p> </td> </tr> <tr> <td data-bbox="311 1556 486 1747">  <p><b>U</b></p> <p>M8x35</p> <p>x 6</p> </td> <td data-bbox="502 1556 678 1747">  <p><b>I</b></p> <p>M6x12</p> <p>x 4</p> </td> <td data-bbox="694 1556 869 1747">  <p><b>M</b></p> <p>x 6</p> </td> <td data-bbox="885 1556 1061 1747">  <p><b>L</b></p> <p>M5x6</p> <p>x 6</p> </td> <td data-bbox="1077 1556 1252 1747">  <p><b>K</b></p> <p>x 6</p> </td> <td data-bbox="1268 1556 1444 1747">  <p><b>H</b></p> <p>x 2</p> </td> </tr> <tr> <td data-bbox="311 1758 486 1948">  <p><b>G</b></p> <p>x 2</p> </td> <td data-bbox="502 1758 678 1948">  <p><b>J</b></p> <p>x 2</p> </td> <td data-bbox="694 1758 869 1948">  <p><b>N</b></p> <p>x 2</p> </td> <td data-bbox="885 1758 1061 1948">  <p><b>O</b></p> <p>x 1</p> </td> <td data-bbox="1077 1758 1252 1948">  <p><b>TUV</b></p> <p>x 1</p> </td> <td data-bbox="1268 1758 1444 1948">  <p><b>Installation Manual</b></p> <p>x 1</p> </td> </tr> </table>						 <p>Kit</p>	 <p><b>Q</b></p> <p>x 6</p>	 <p><b>R</b></p> <p>x 6</p>	 <p><b>S</b></p> <p>x 6</p>	 <p><b>P</b></p> <p>x 12</p>	 <p><b>V</b></p> <p>x 6</p>	 <p><b>T</b></p> <p>Ø6</p> <p>x 6</p>	 <p><b>U</b></p> <p>M8x35</p> <p>x 6</p>	 <p><b>I</b></p> <p>M6x12</p> <p>x 4</p>	 <p><b>M</b></p> <p>x 6</p>	 <p><b>L</b></p> <p>M5x6</p> <p>x 6</p>	 <p><b>K</b></p> <p>x 6</p>	 <p><b>H</b></p> <p>x 2</p>	 <p><b>G</b></p> <p>x 2</p>	 <p><b>J</b></p> <p>x 2</p>	 <p><b>N</b></p> <p>x 2</p>	 <p><b>O</b></p> <p>x 1</p>	 <p><b>TUV</b></p> <p>x 1</p>	 <p><b>Installation Manual</b></p> <p>x 1</p>
 <p>Kit</p>	 <p><b>Q</b></p> <p>x 6</p>	 <p><b>R</b></p> <p>x 6</p>	 <p><b>S</b></p> <p>x 6</p>	 <p><b>P</b></p> <p>x 12</p>	 <p><b>V</b></p> <p>x 6</p>	 <p><b>T</b></p> <p>Ø6</p> <p>x 6</p>																		
 <p><b>U</b></p> <p>M8x35</p> <p>x 6</p>	 <p><b>I</b></p> <p>M6x12</p> <p>x 4</p>	 <p><b>M</b></p> <p>x 6</p>	 <p><b>L</b></p> <p>M5x6</p> <p>x 6</p>	 <p><b>K</b></p> <p>x 6</p>	 <p><b>H</b></p> <p>x 2</p>																			
 <p><b>G</b></p> <p>x 2</p>	 <p><b>J</b></p> <p>x 2</p>	 <p><b>N</b></p> <p>x 2</p>	 <p><b>O</b></p> <p>x 1</p>	 <p><b>TUV</b></p> <p>x 1</p>	 <p><b>Installation Manual</b></p> <p>x 1</p>																			



Mountain Top Roll  
Installation Instructions

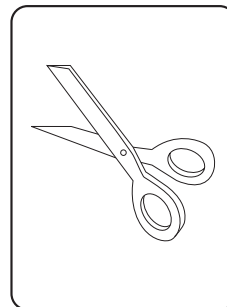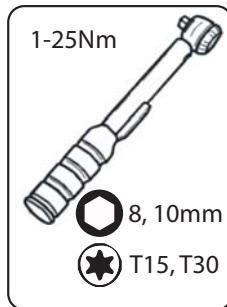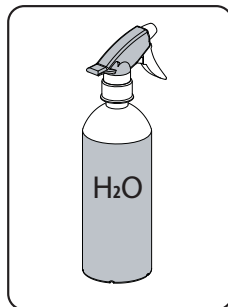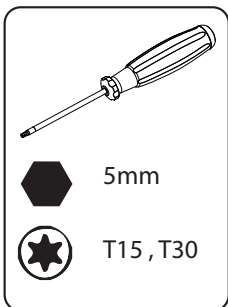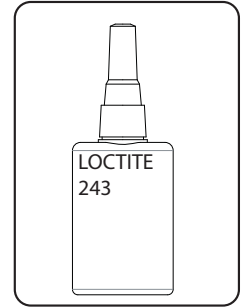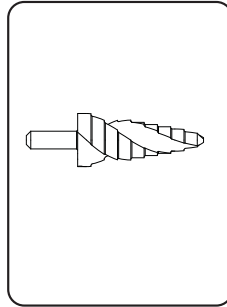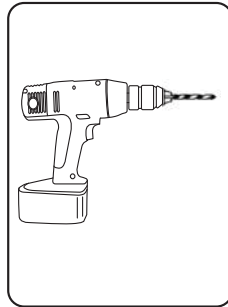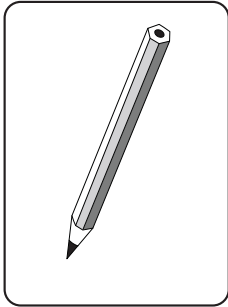


Mountain Top Roll  
Installation Instructions

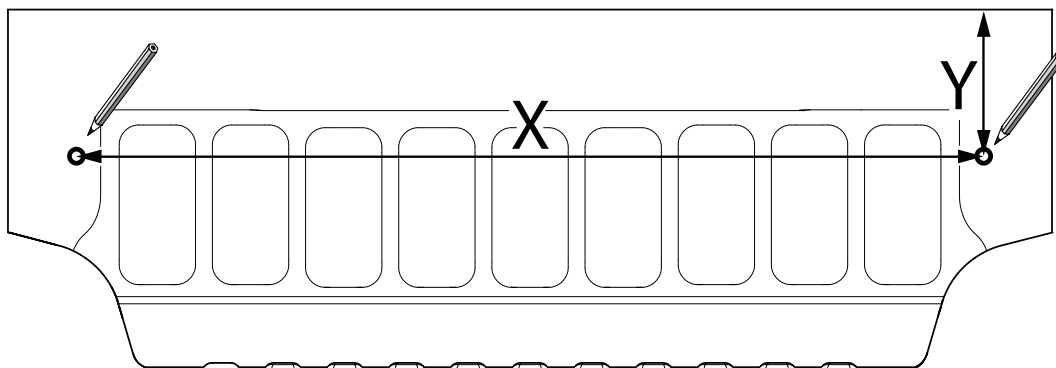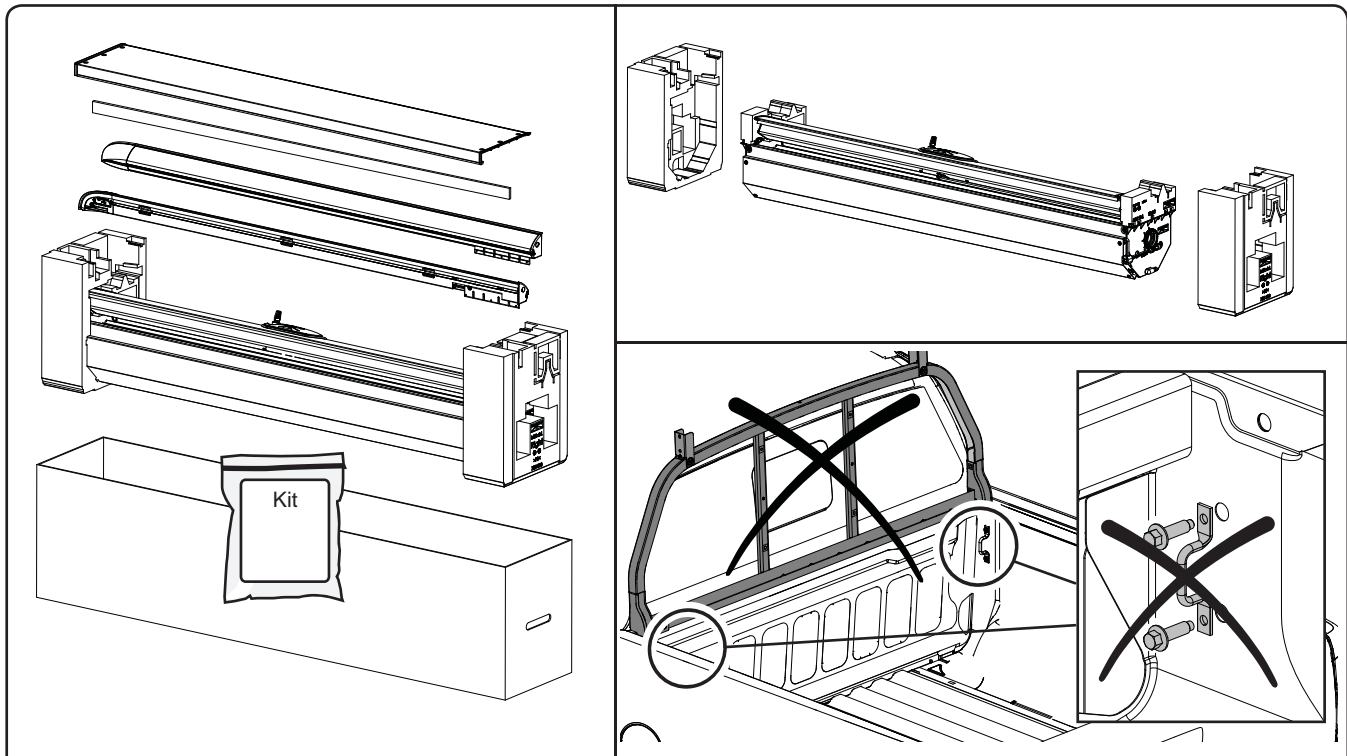




	Plain bed	
	X	Y
TOYOTA	1421	180
ISUZU	1456	190
FORD	1460	208
VW	1505	170

Mountain Top Roll  
Installation Instructions

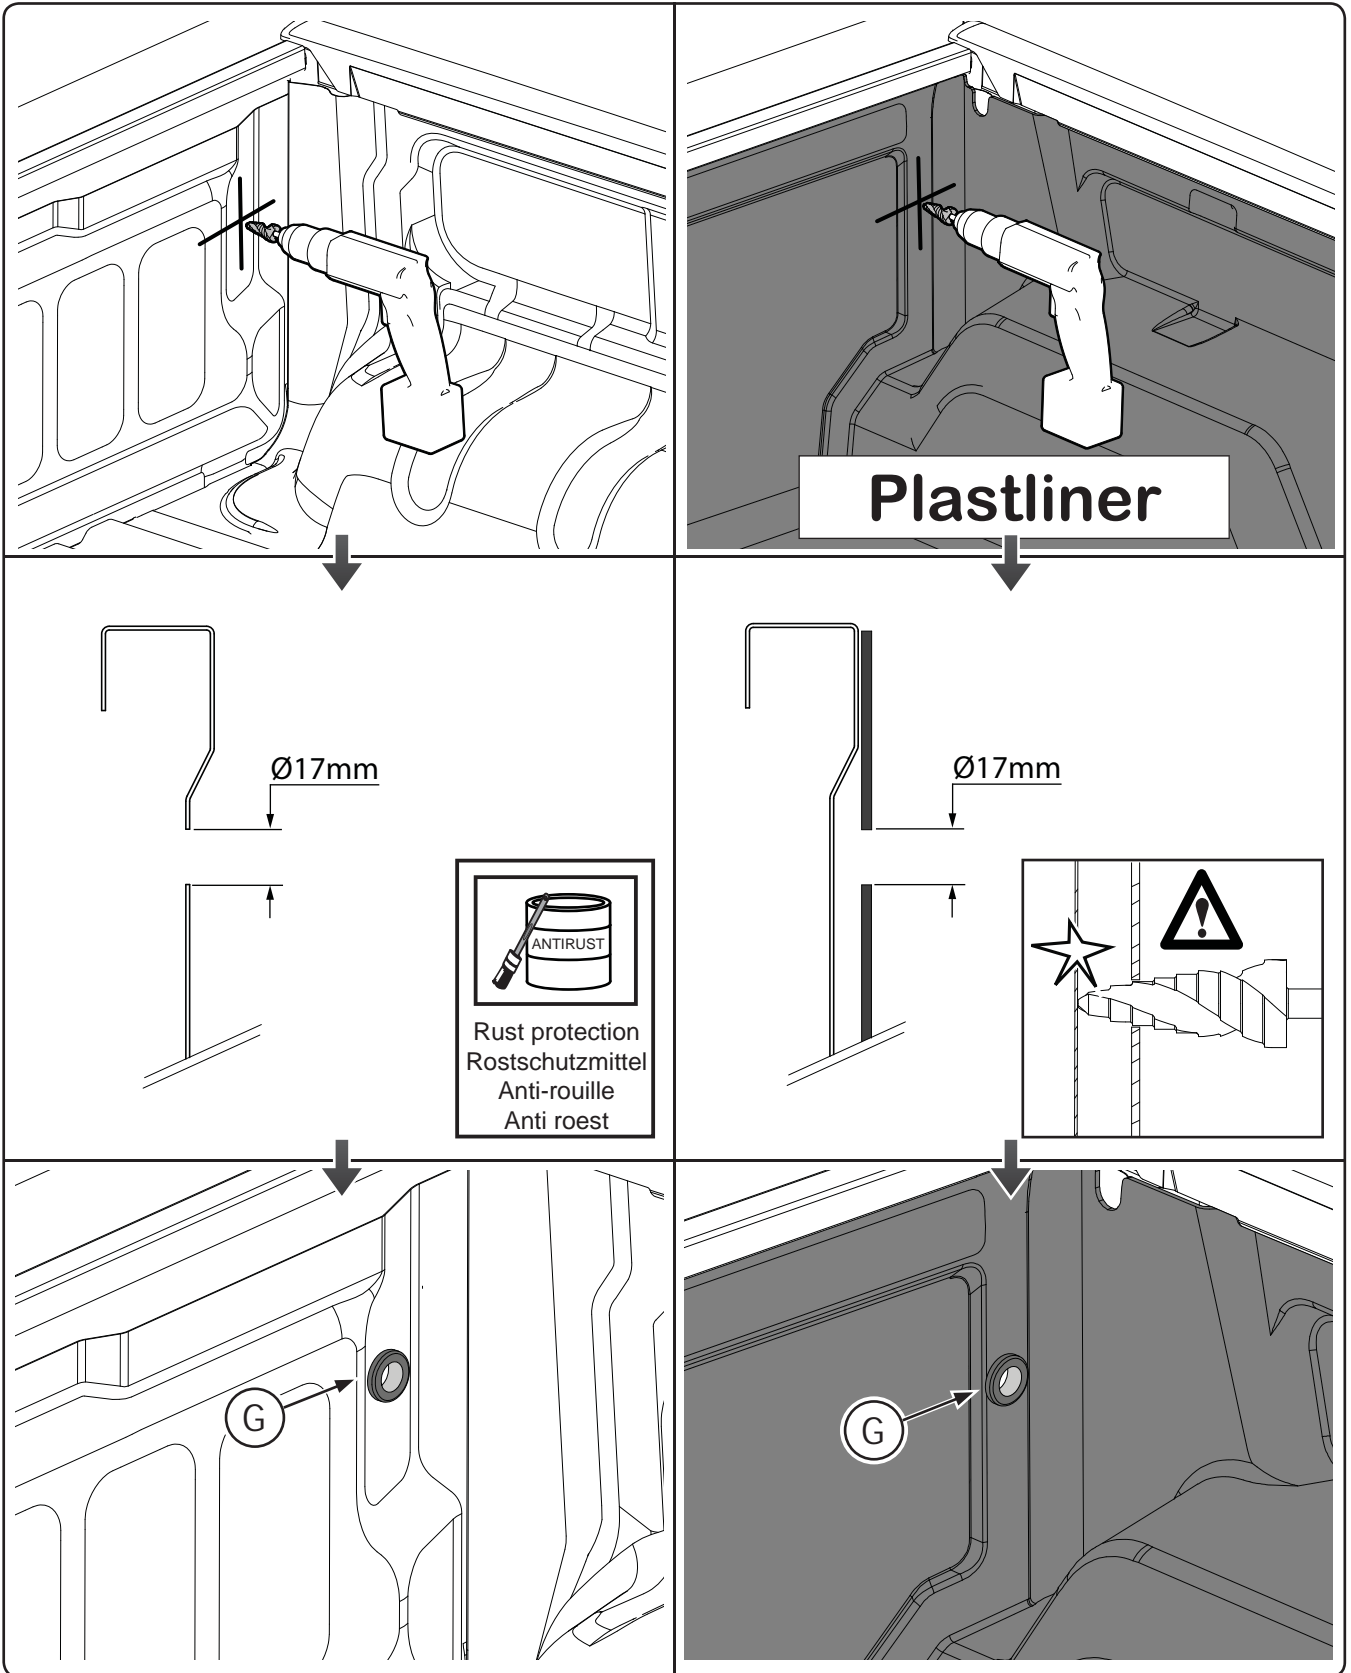






Mountain Top Roll  
Installation Instructions

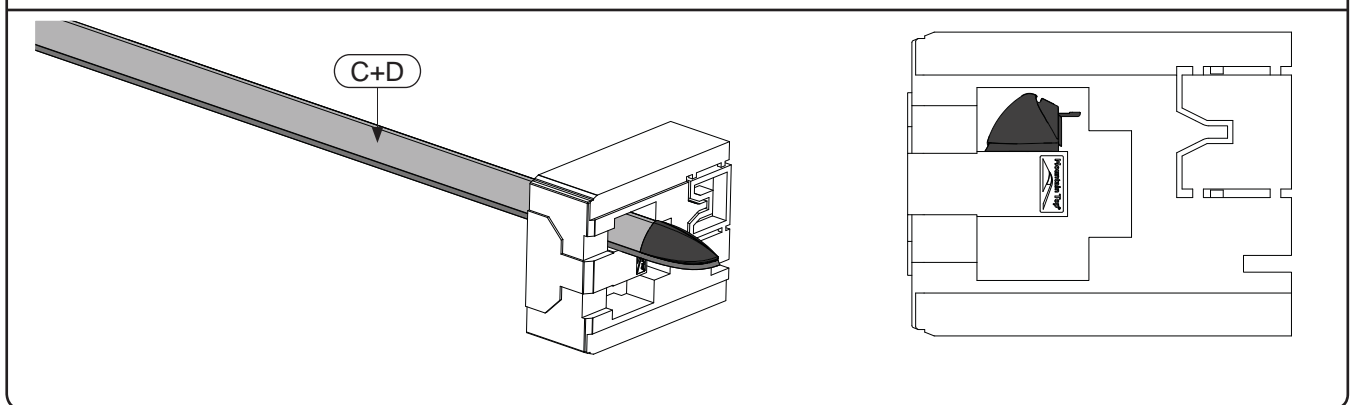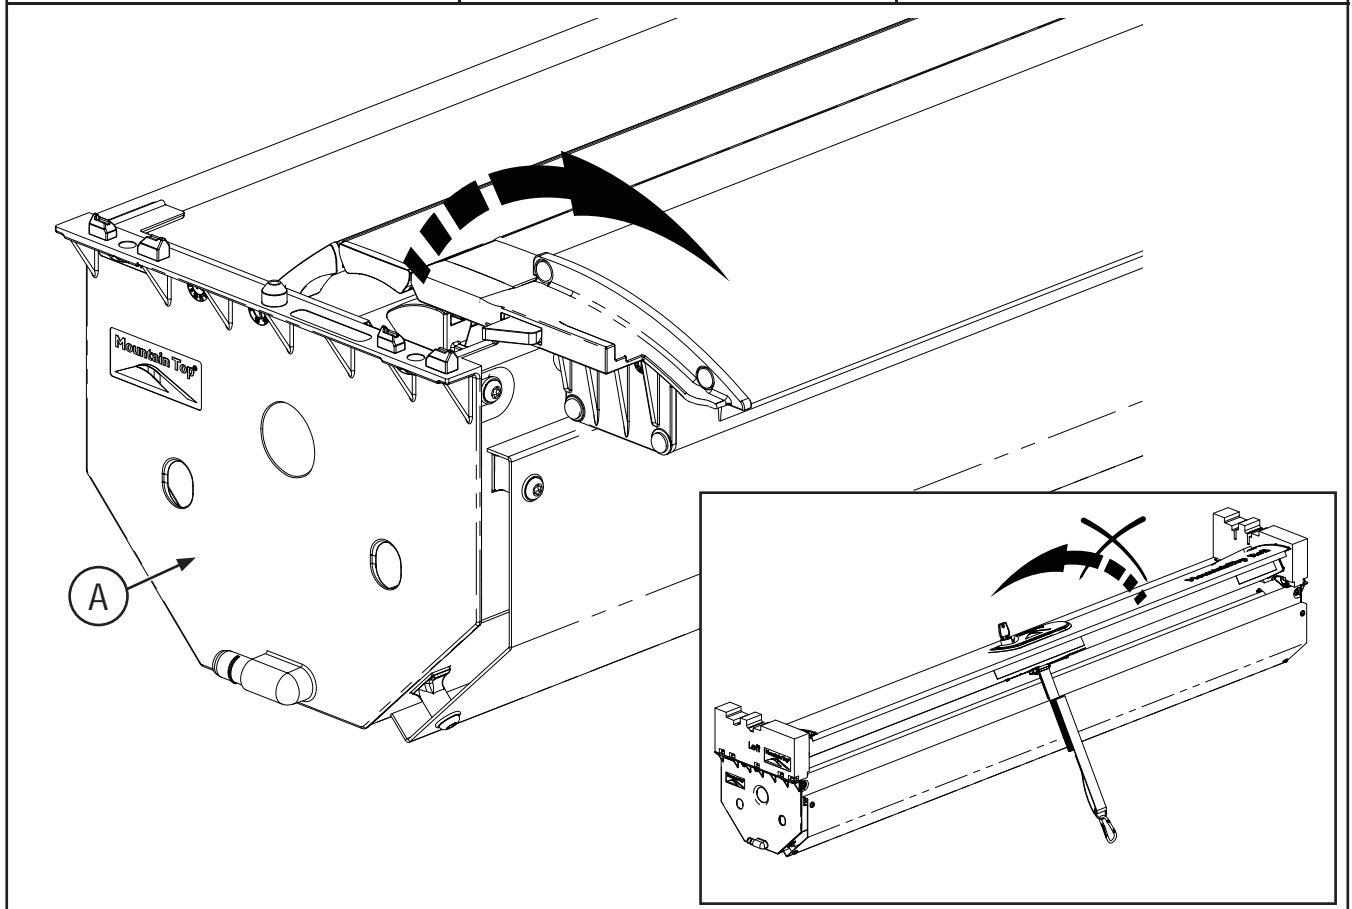
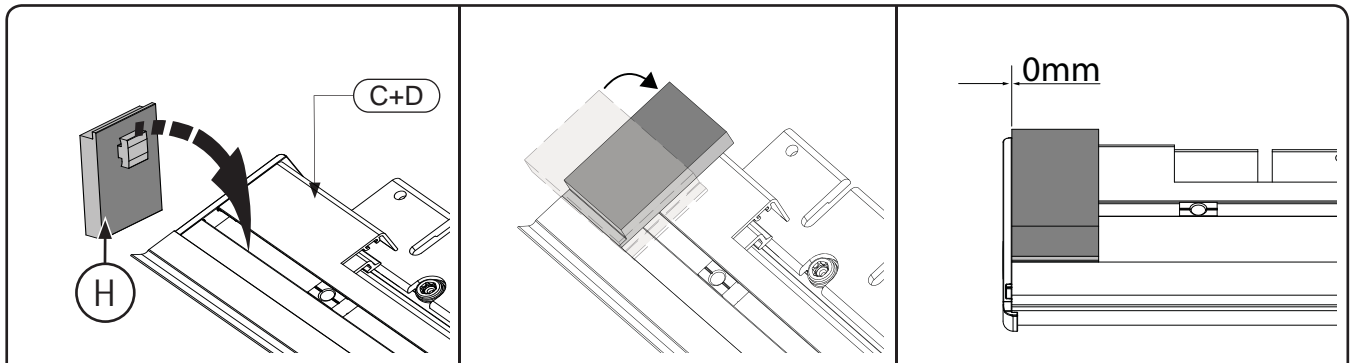





Mountain Top Roll  
Installation Instructions

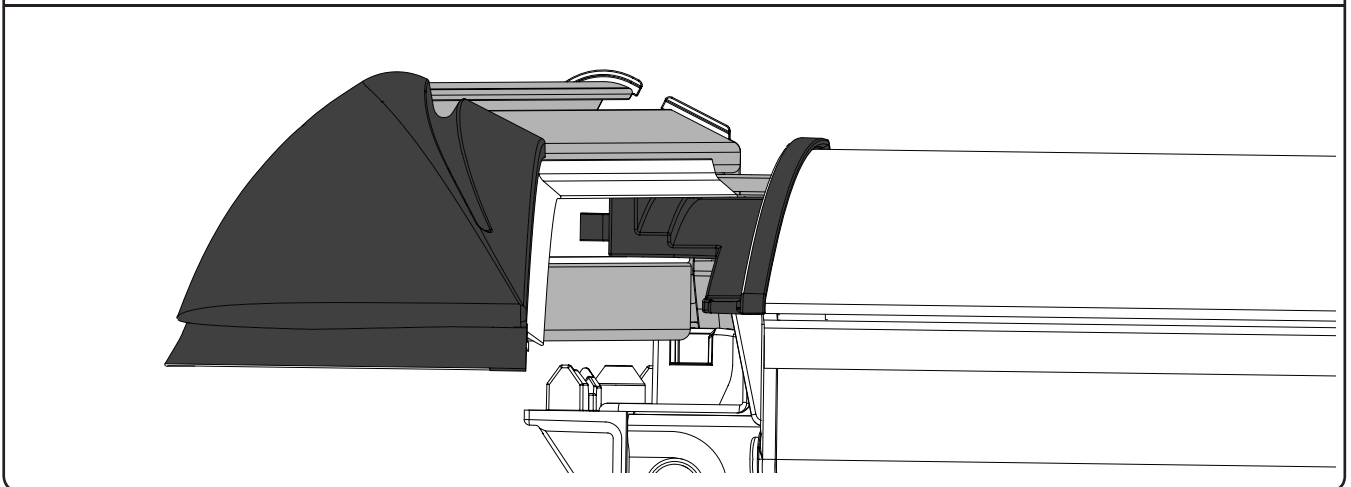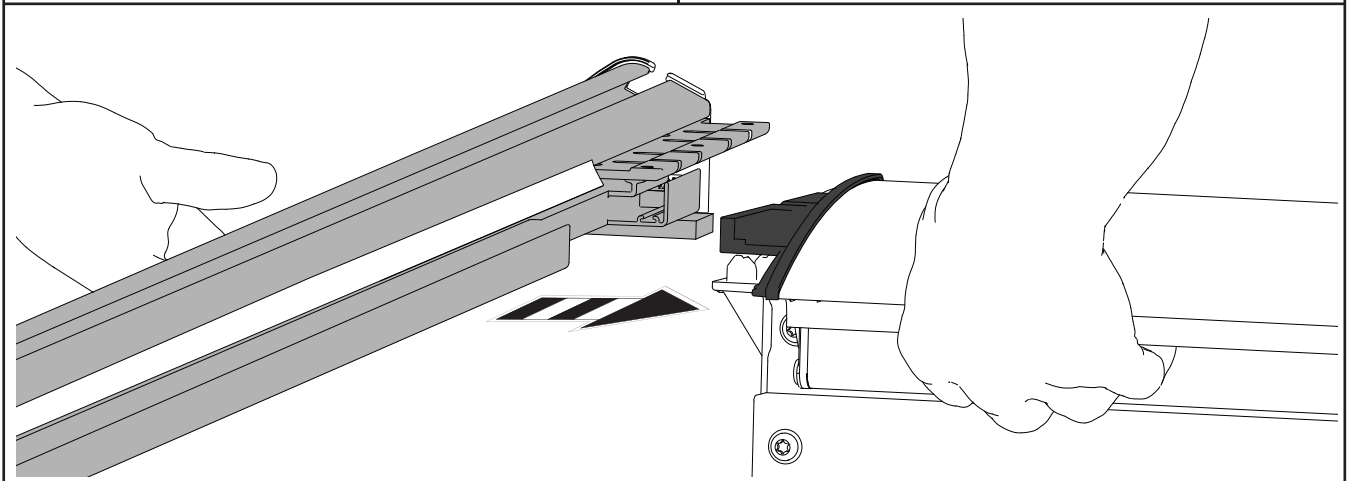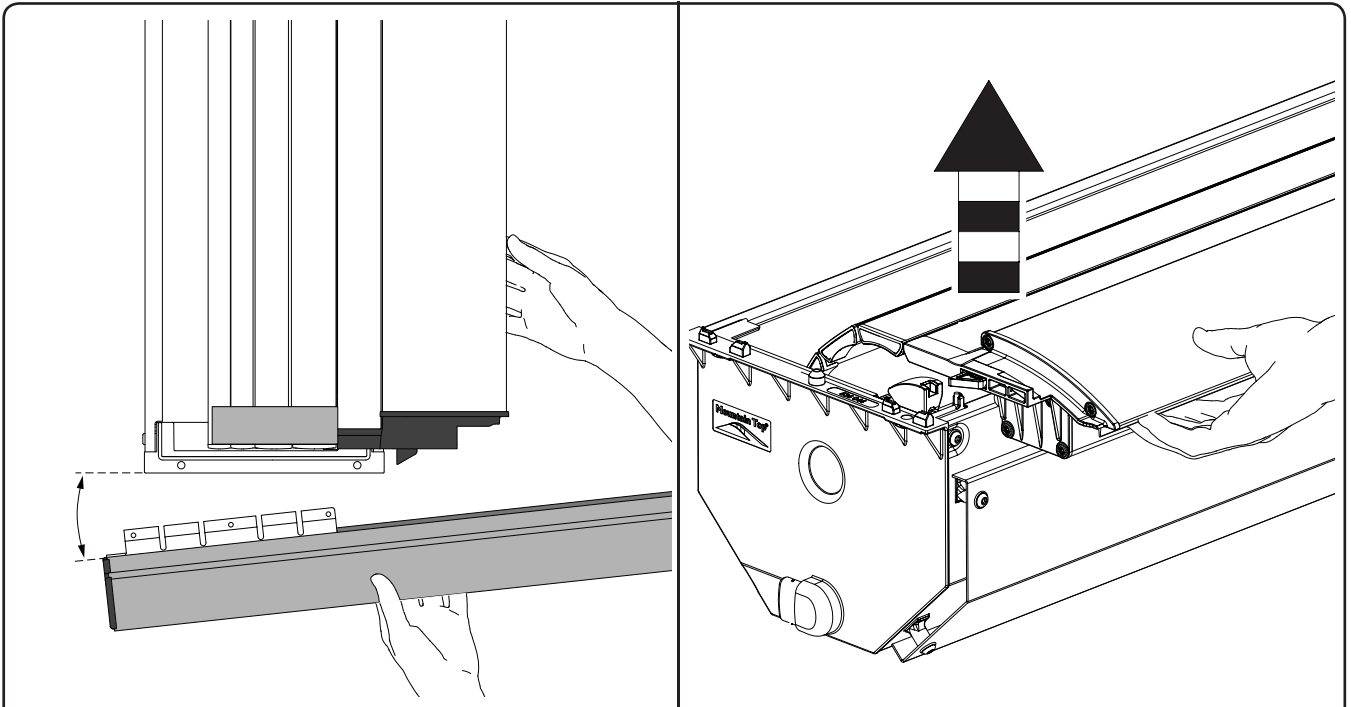

Mountain Top Roll  
Installation Instructions

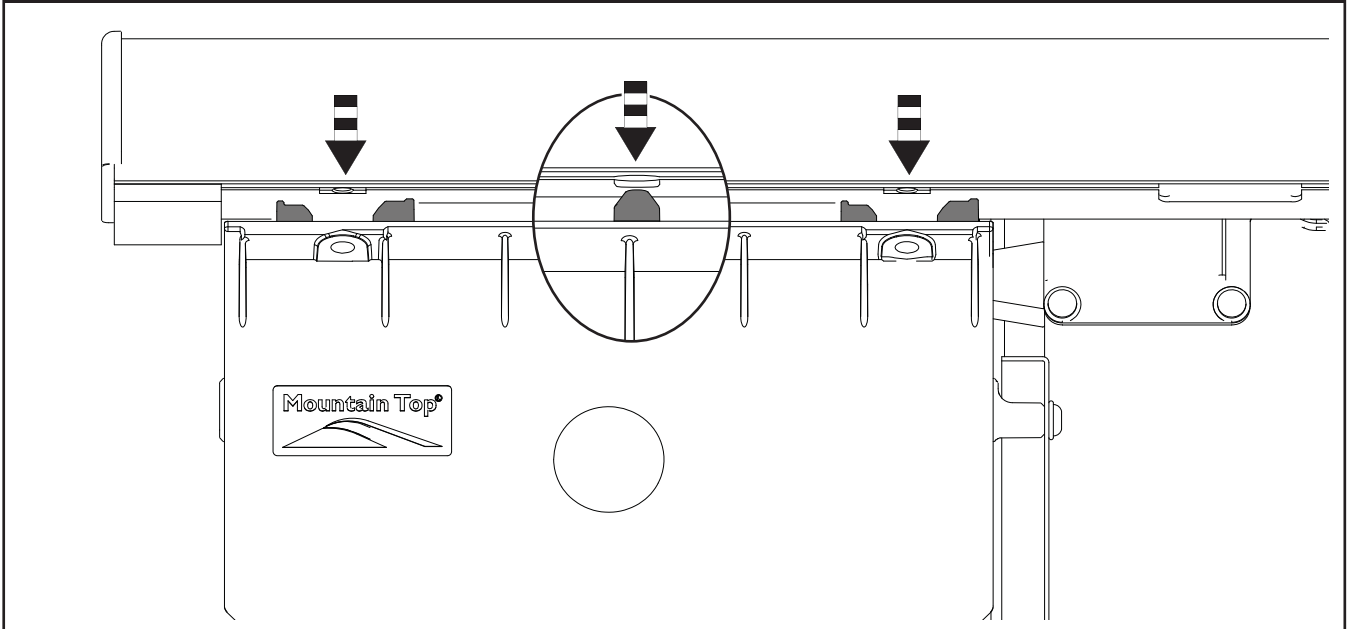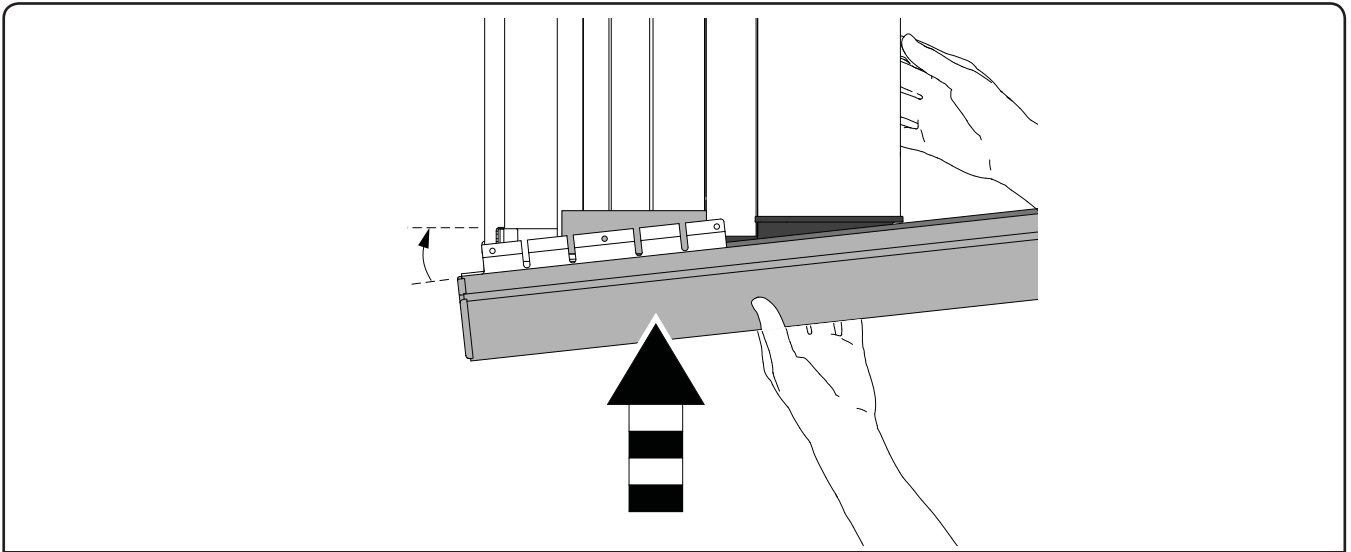



 T30 4,8 +/-1Nm

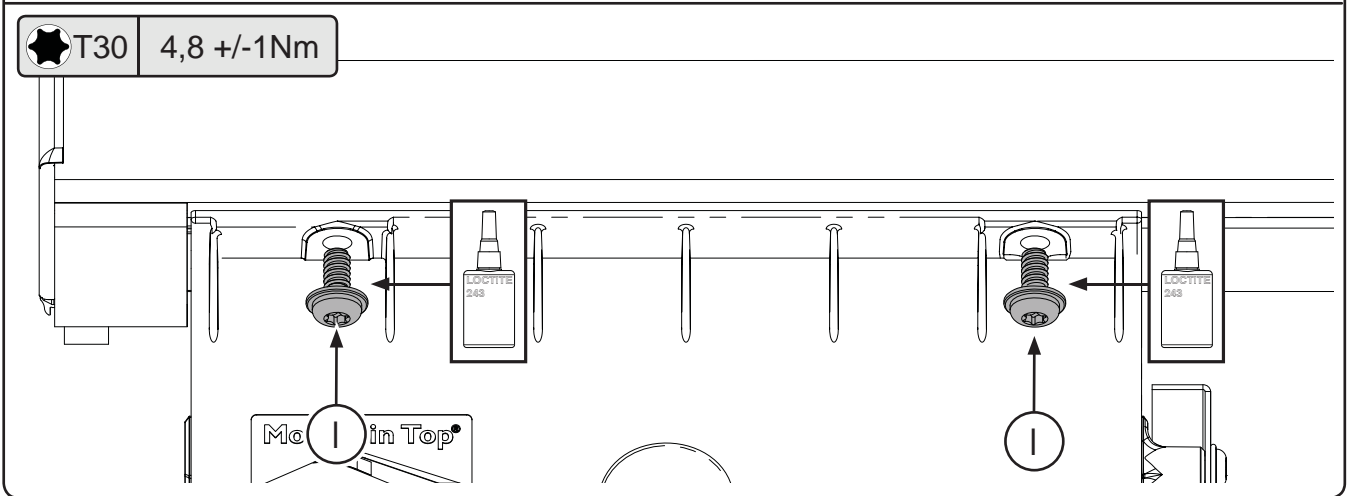







Mountain Top Roll  
Installation Instructions

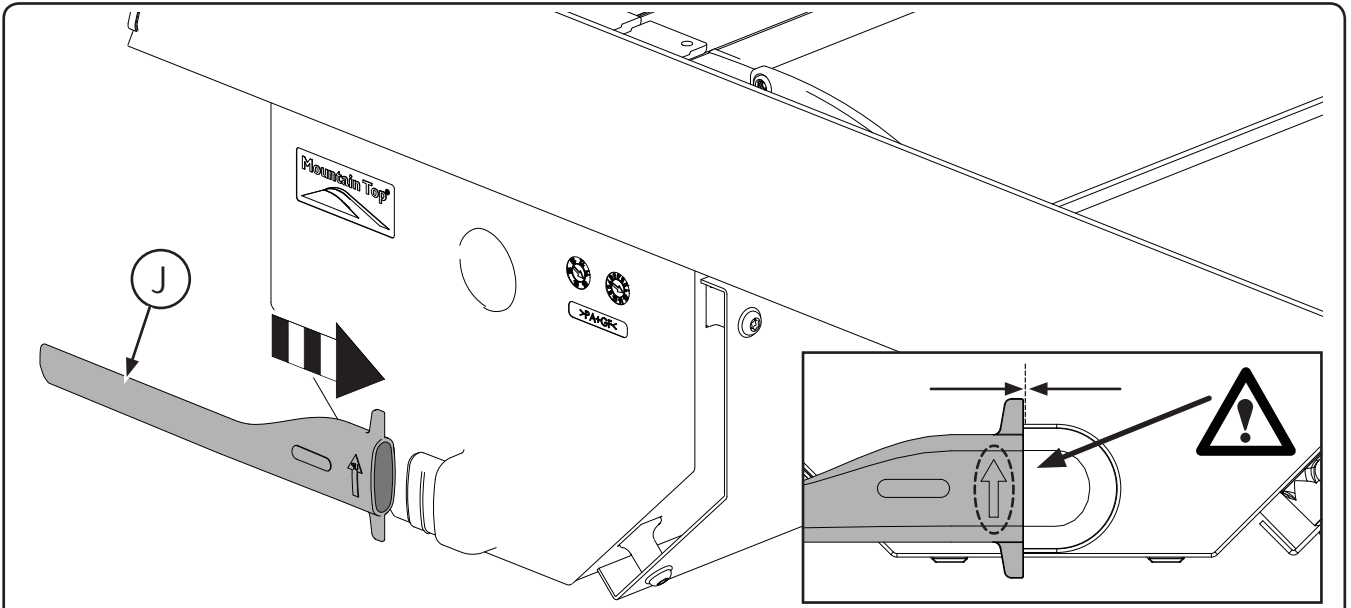




 T15 1,8 +/-0,2Nm

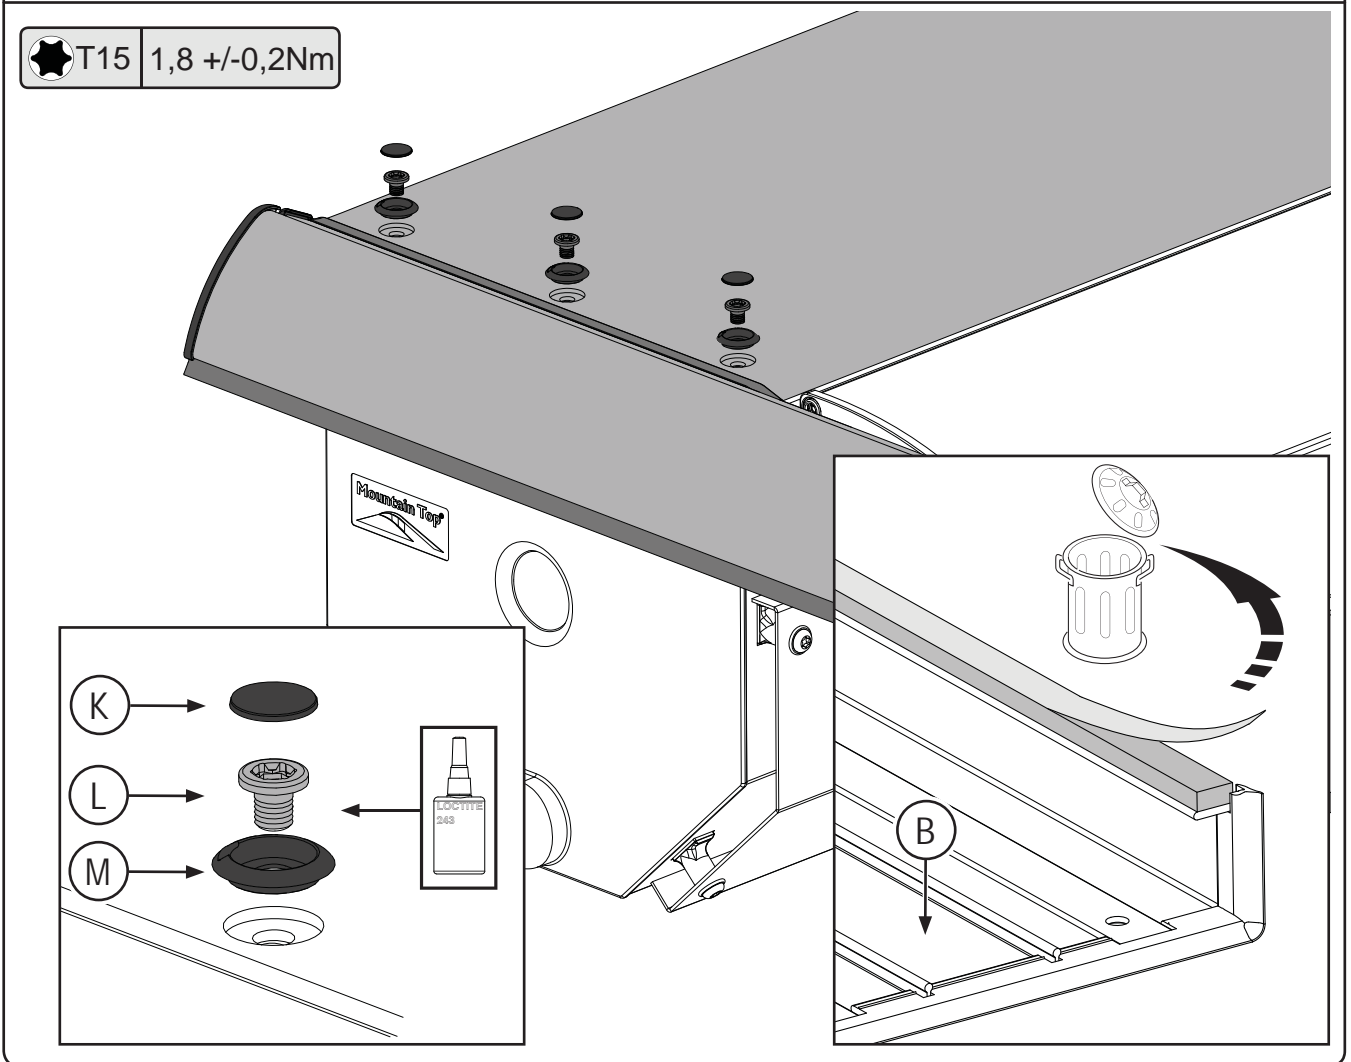

**Mountain Top Roll  
Installation Instructions**

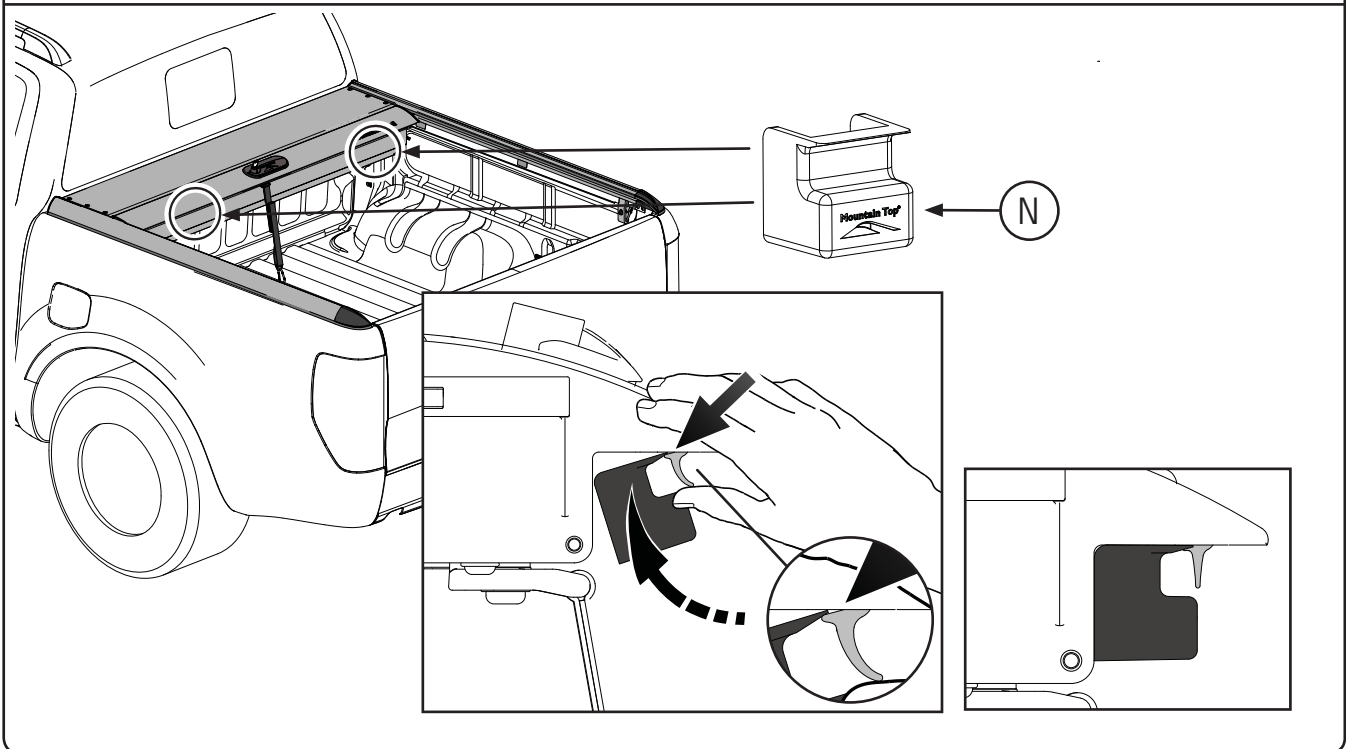
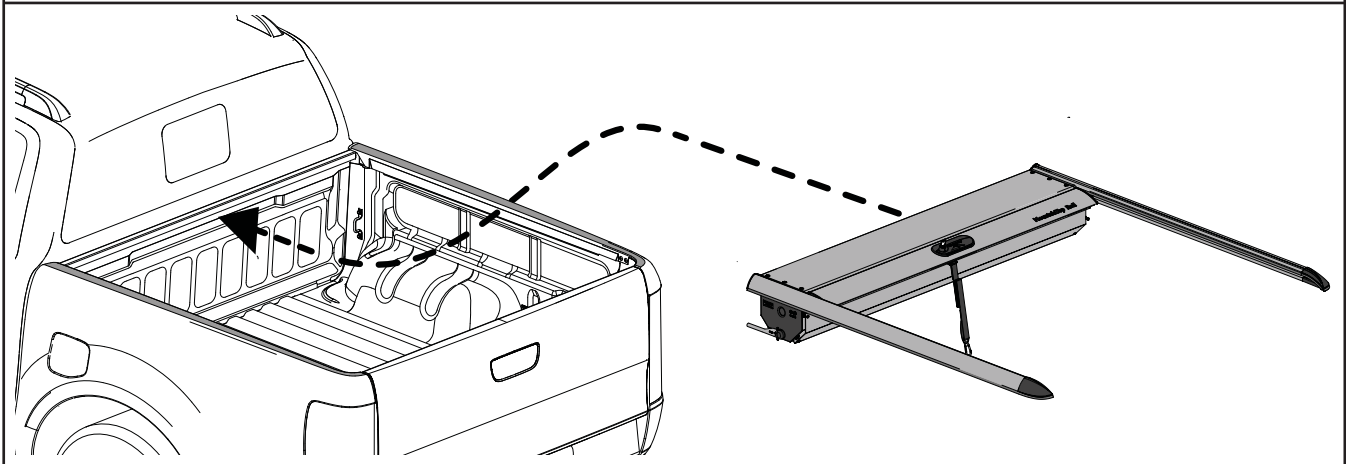
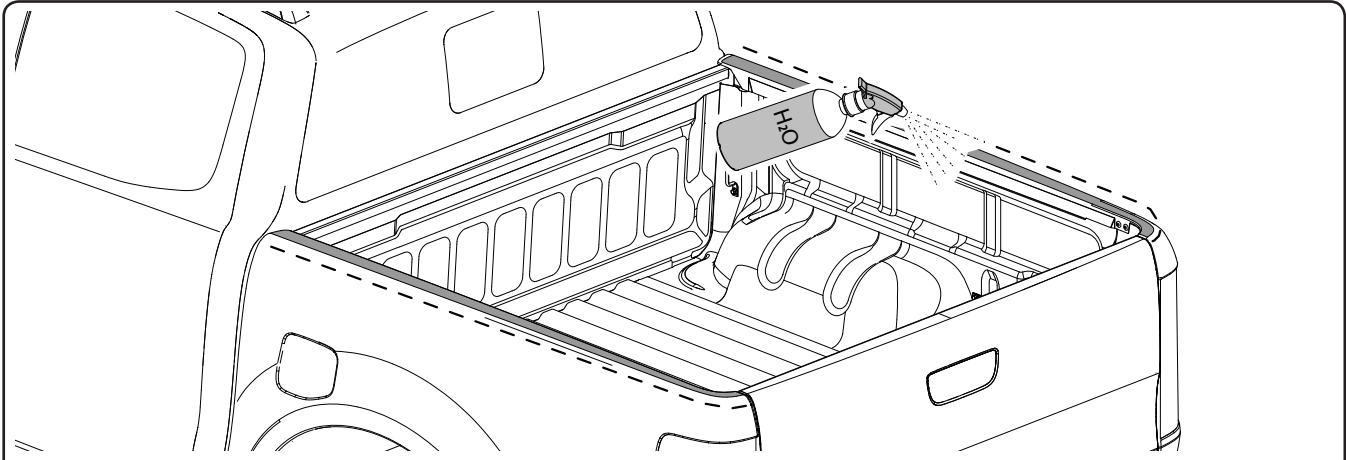


Mountain Top Roll  
Installation Instructions

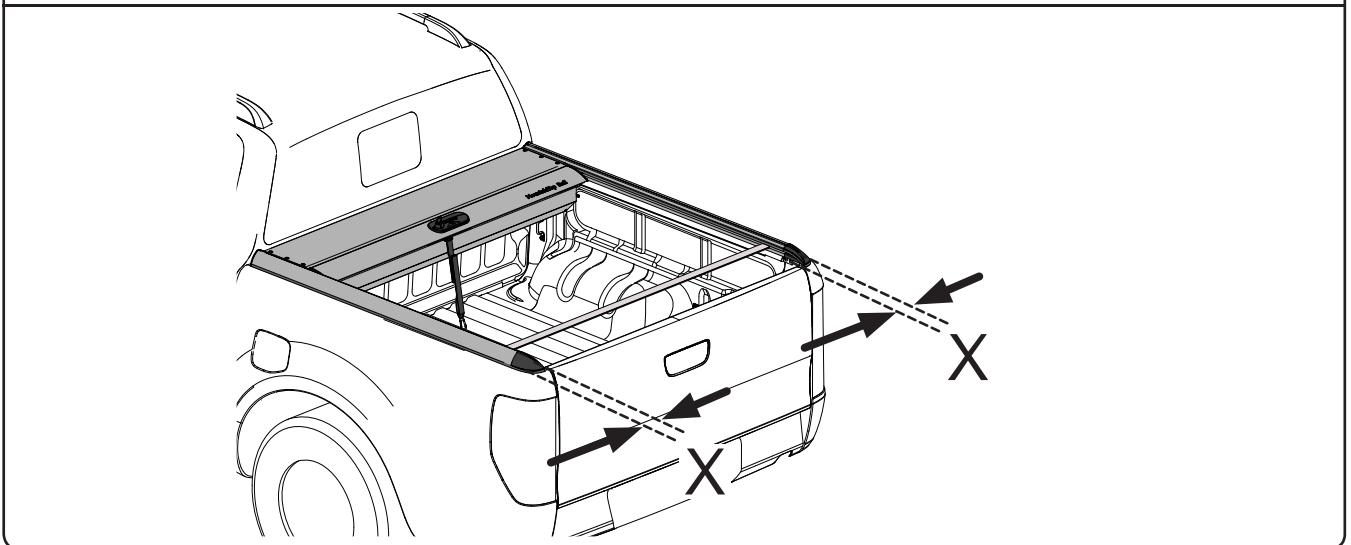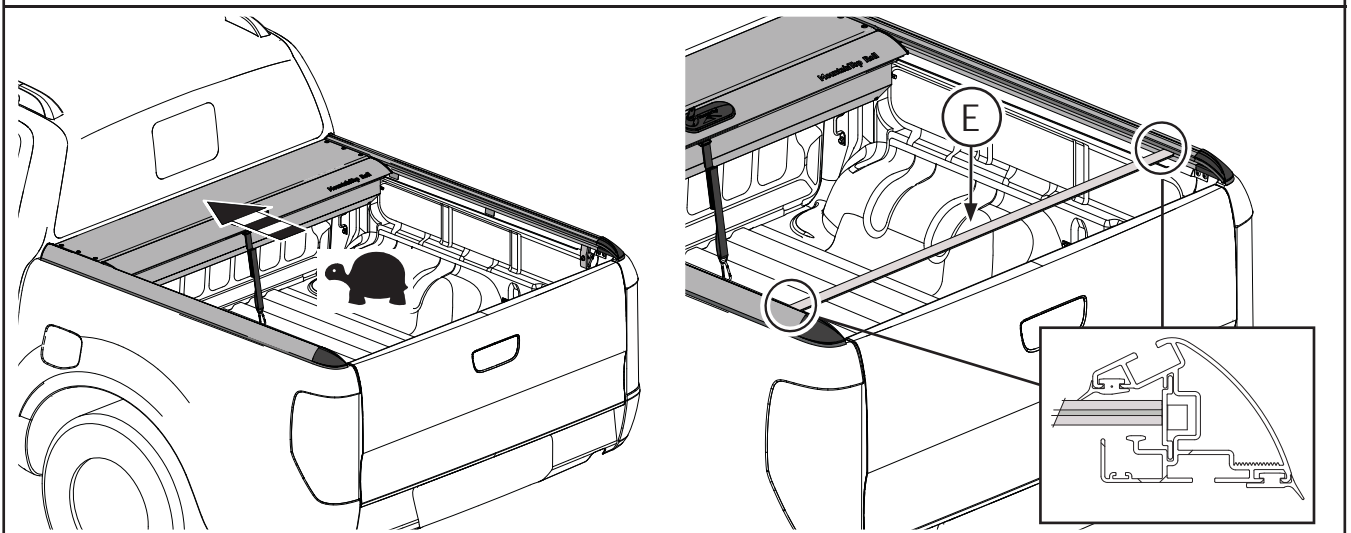
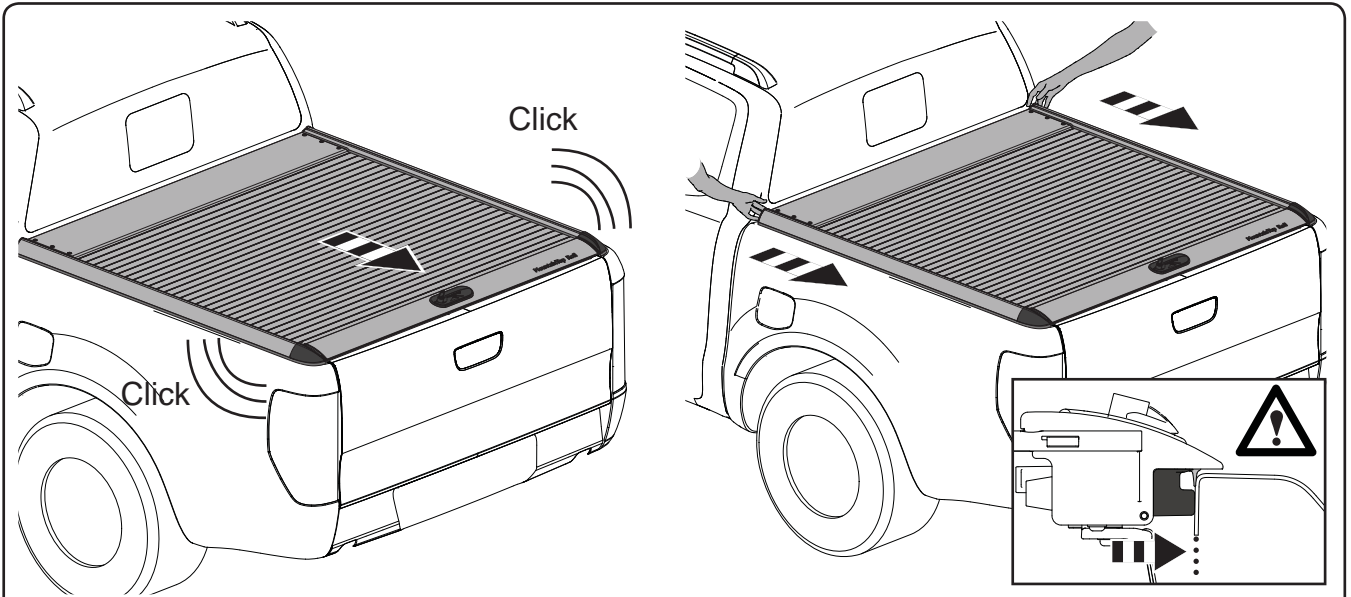




Mountain Top Roll  
Installation Instructions

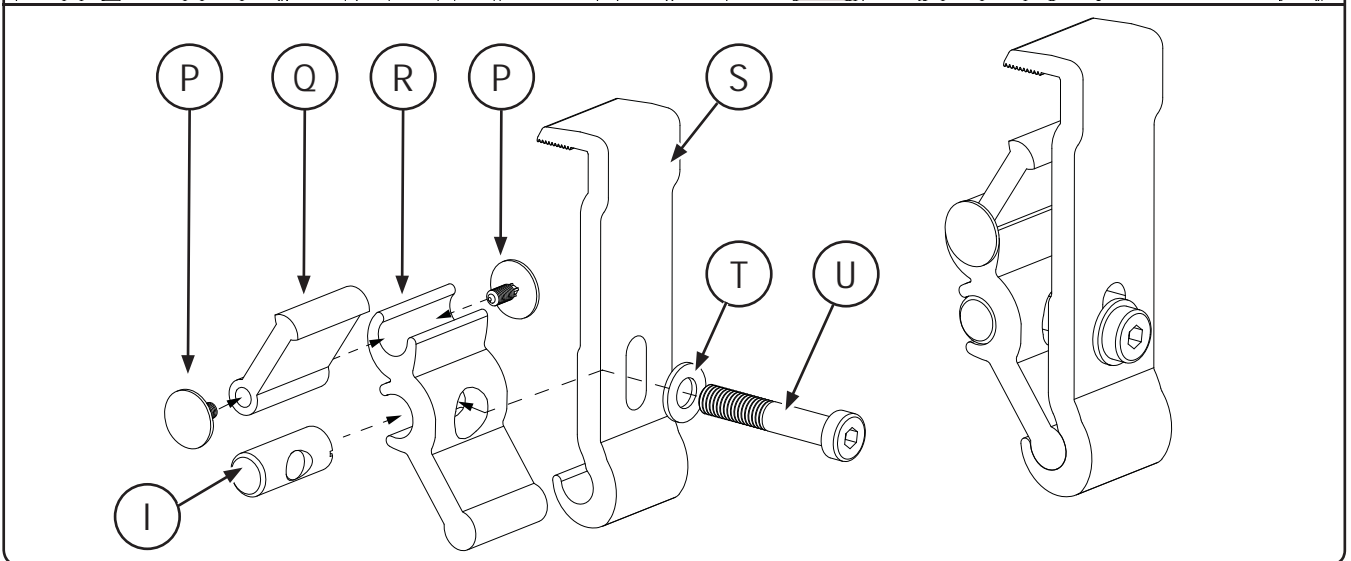
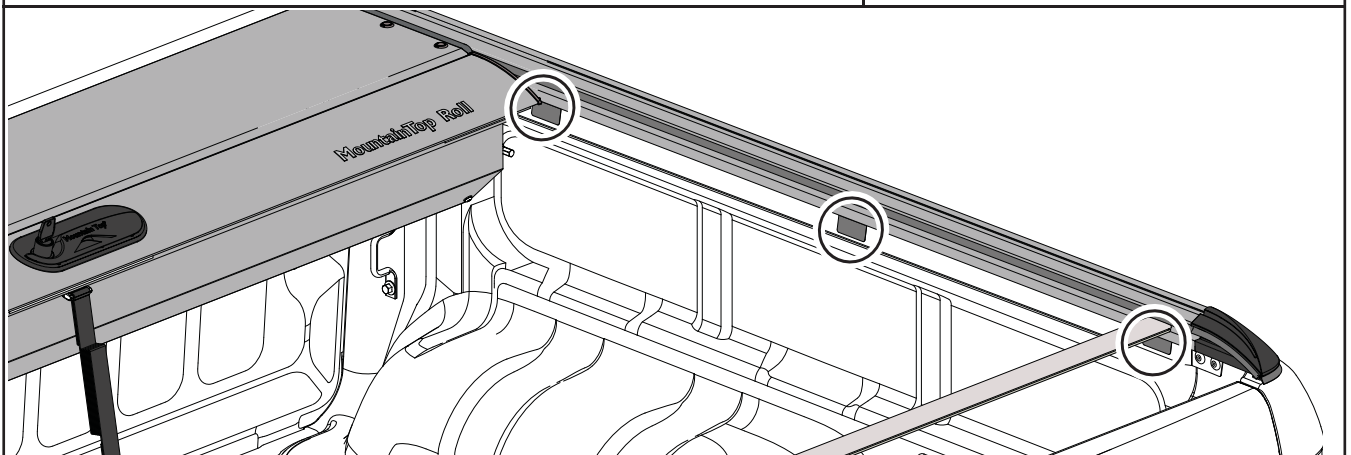
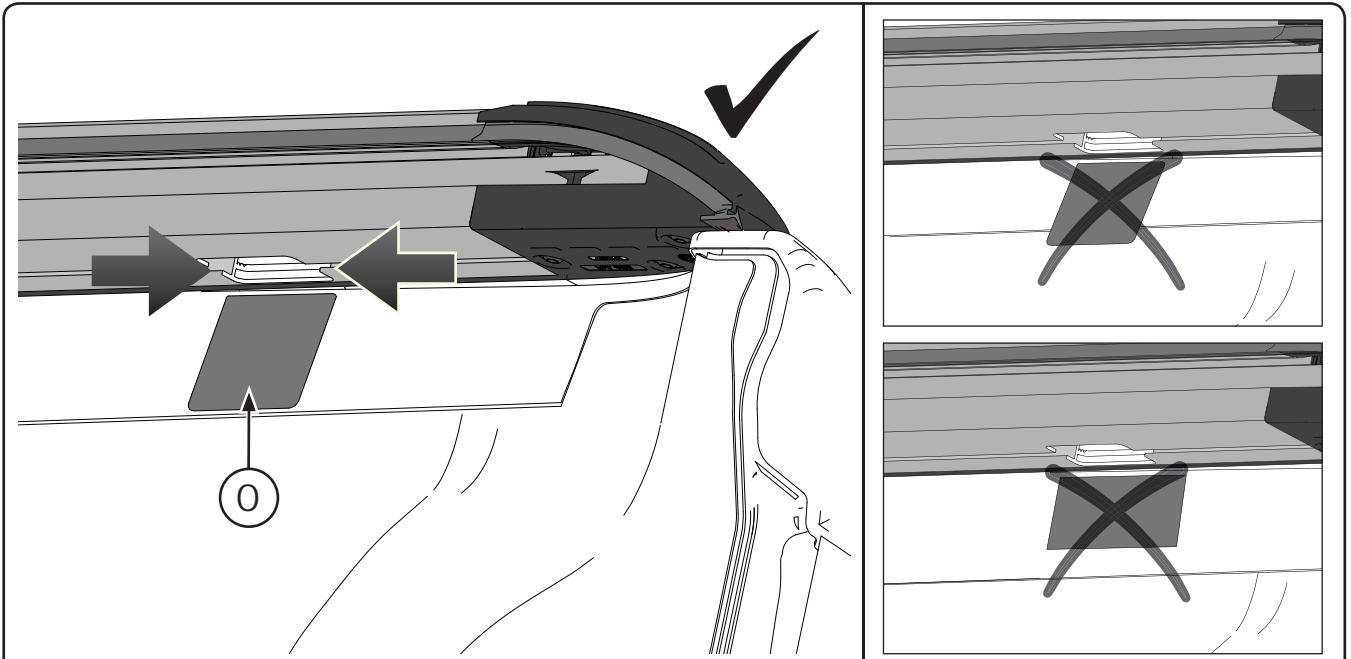


Mountain Top Roll  
Installation Instructions


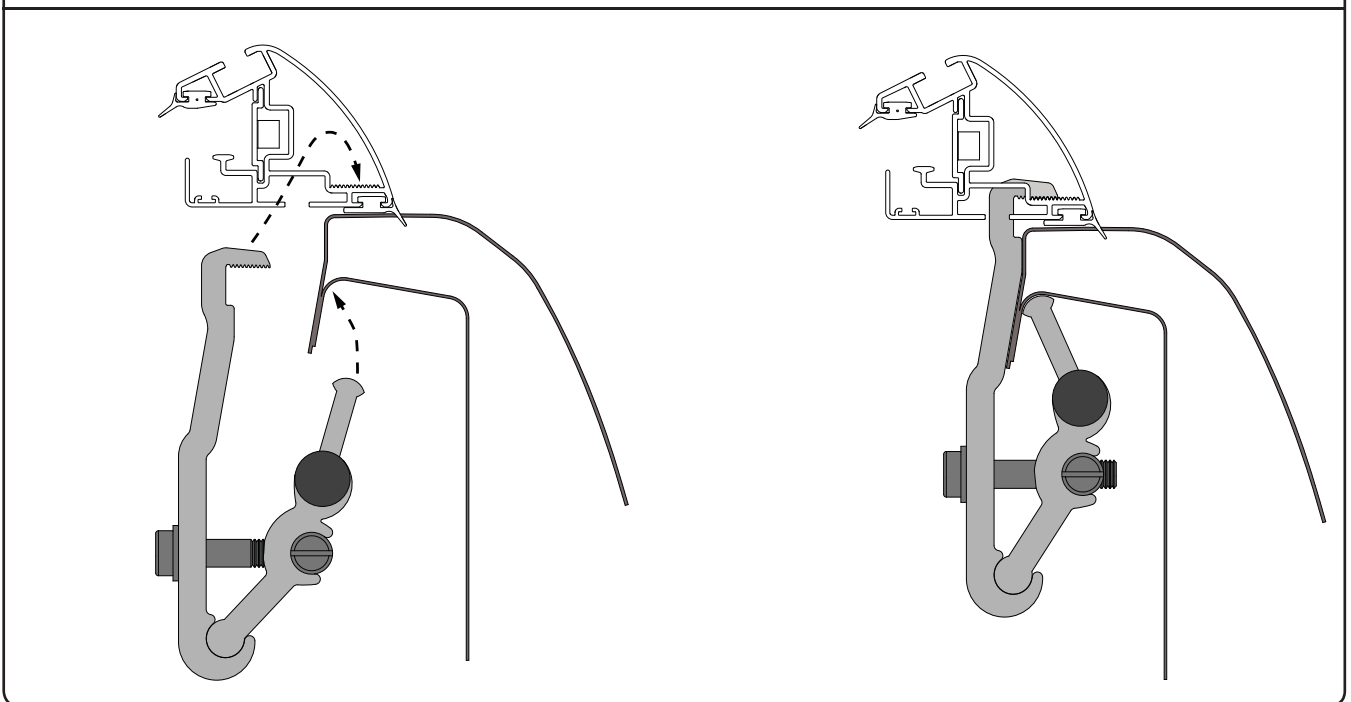
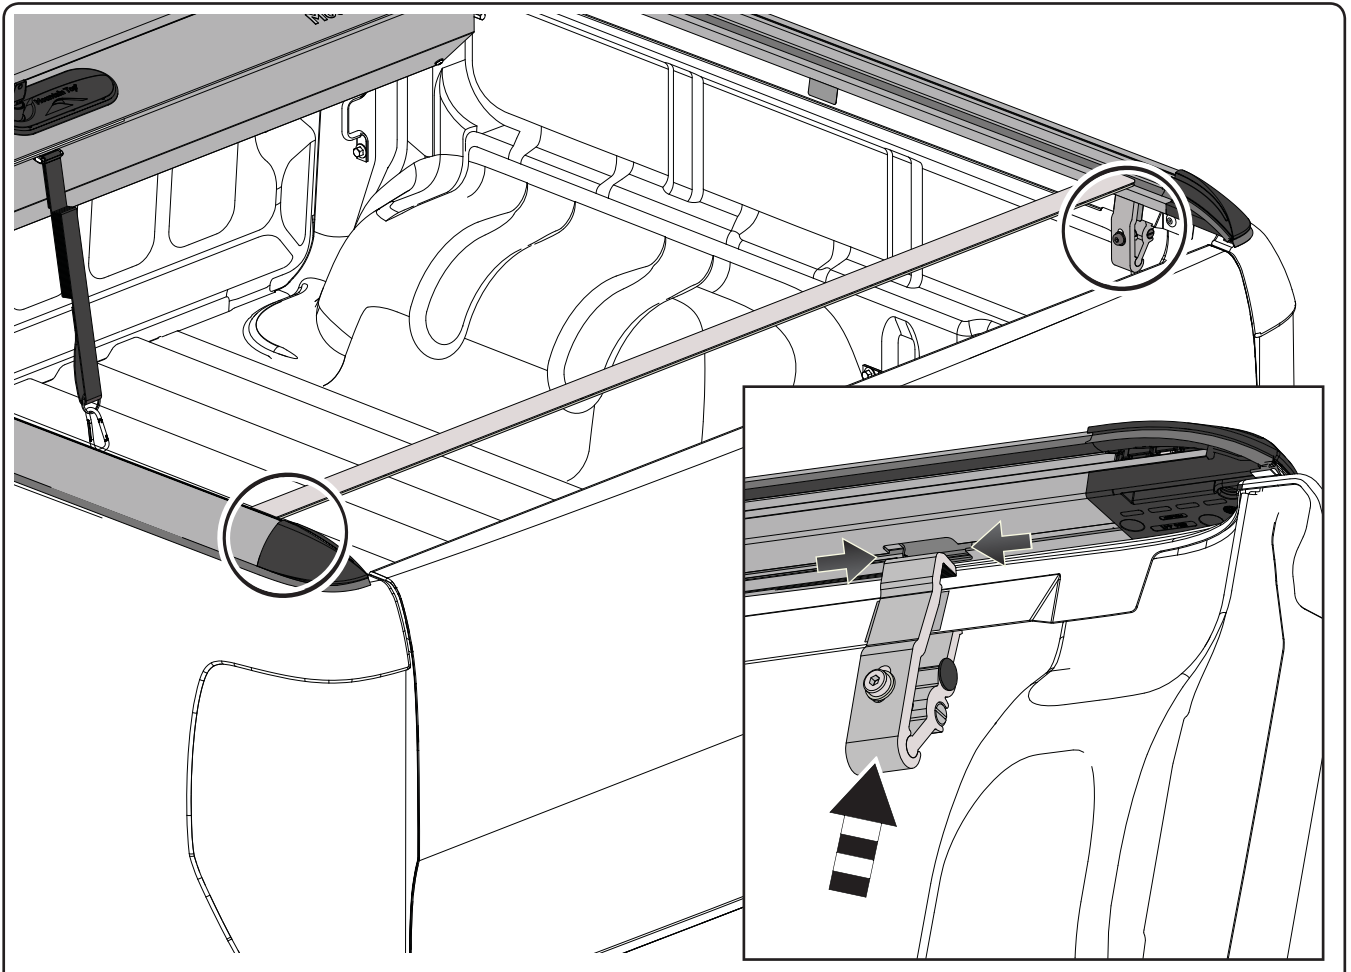




Mountain Top Roll  
Installation Instructions

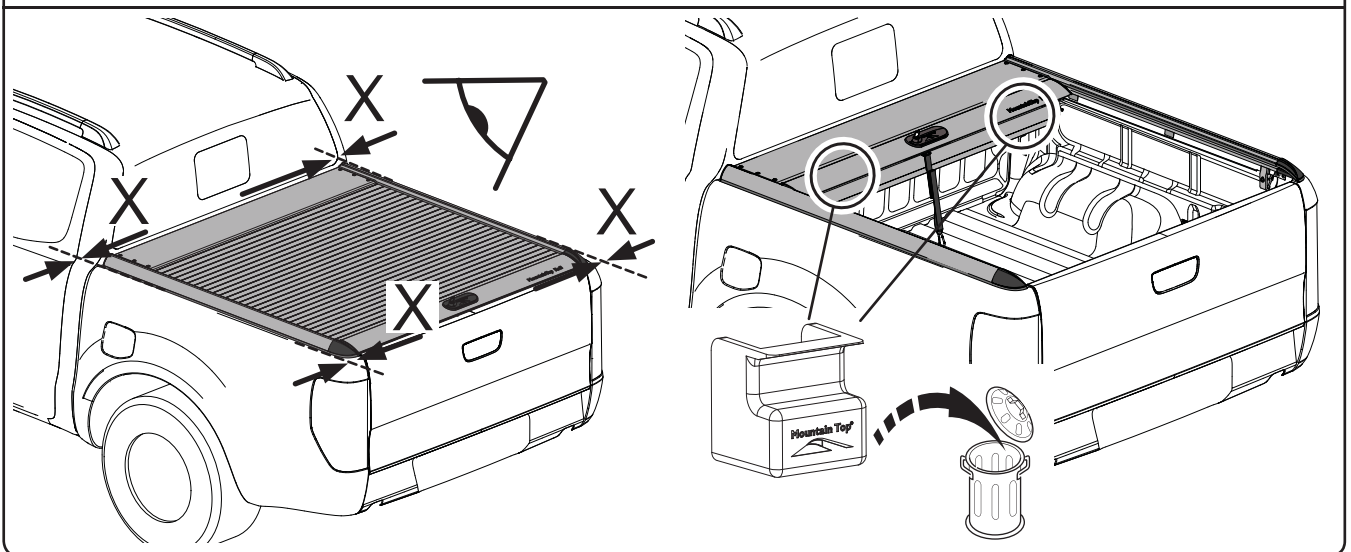
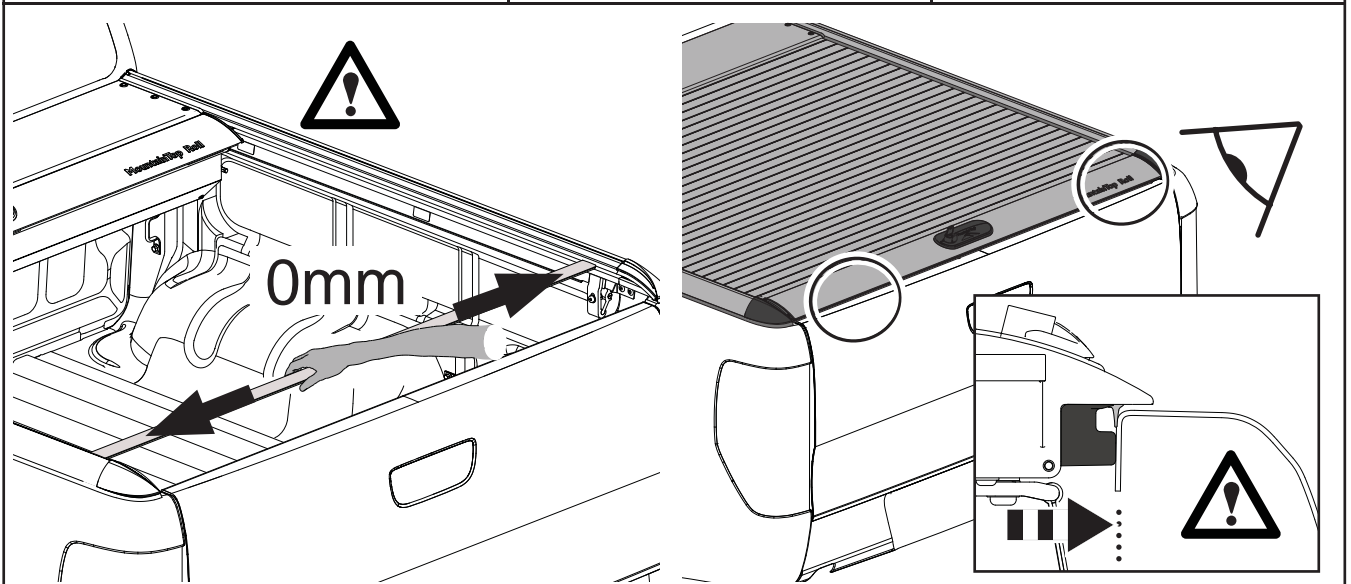
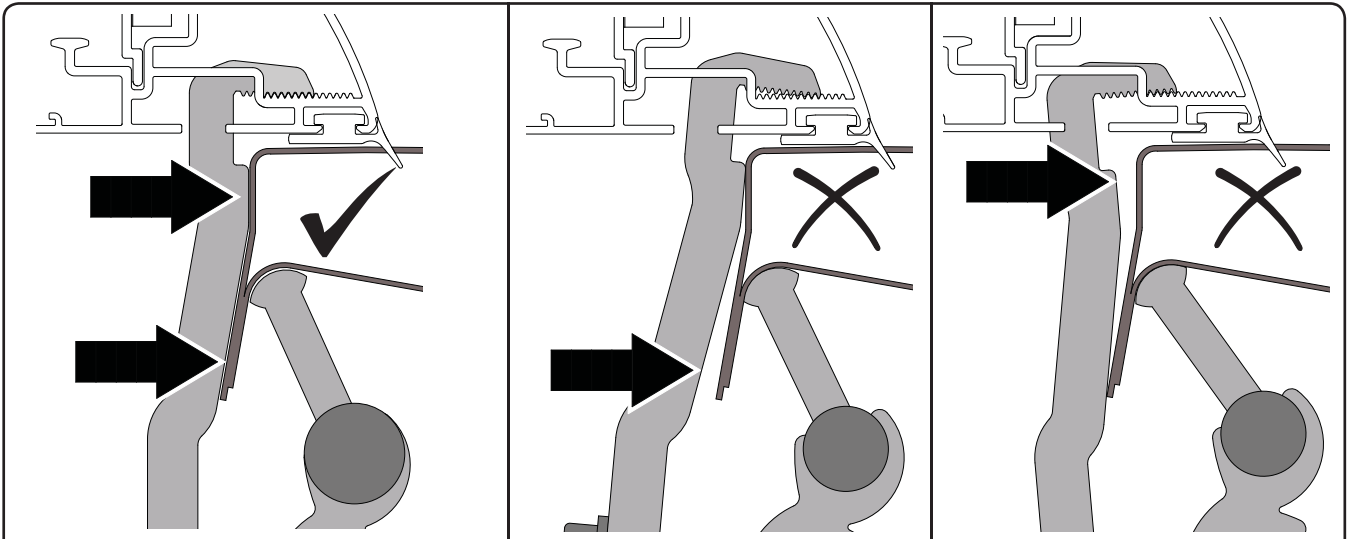


Mountain Top Roll  
Installation Instructions

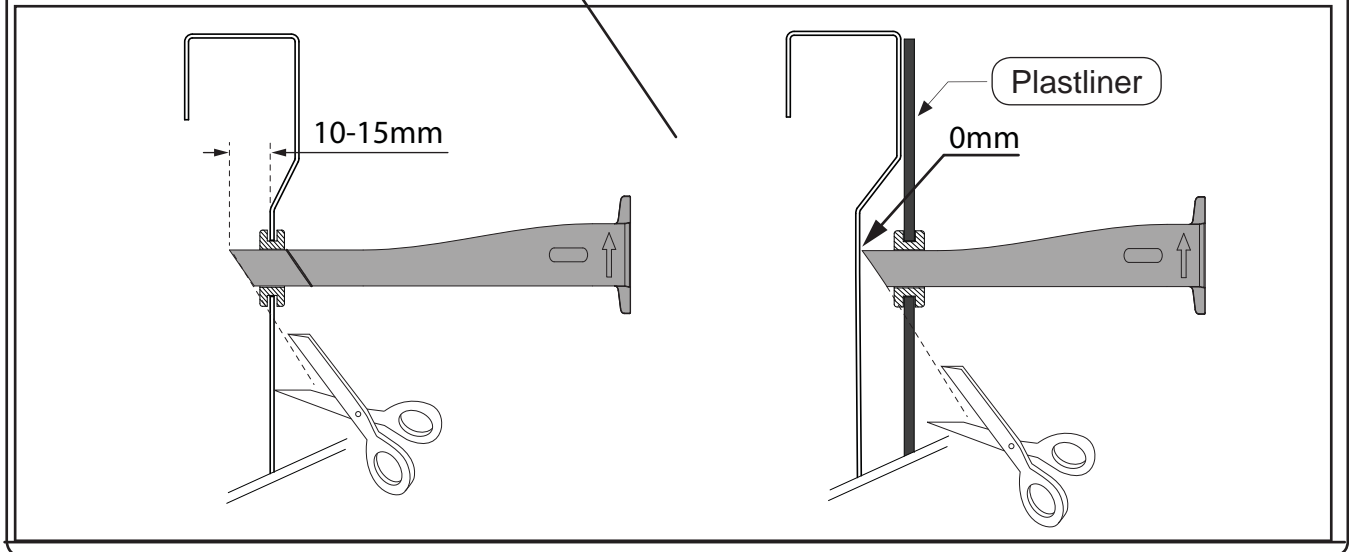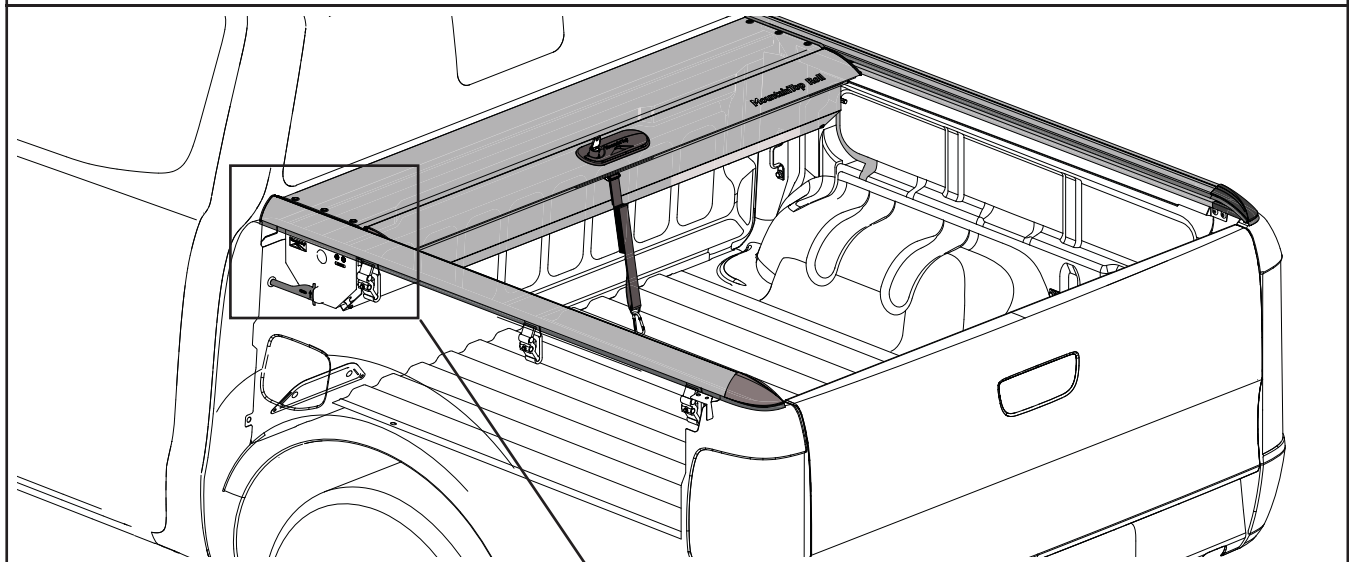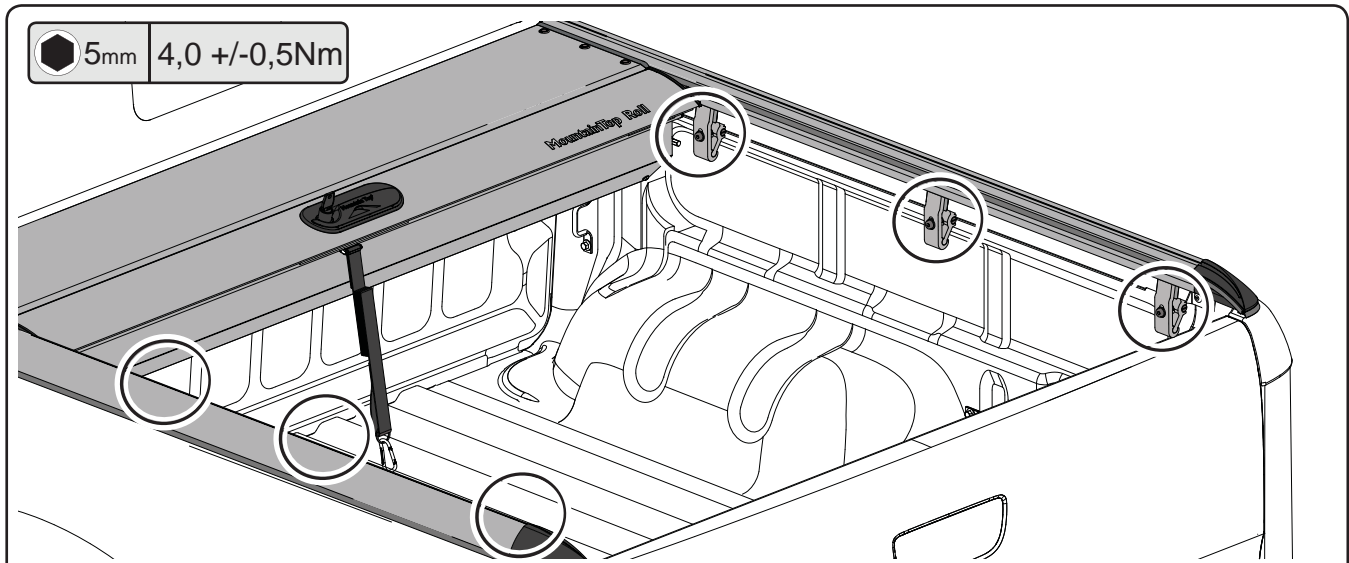








Mountain Top Roll  
Installation Instructions

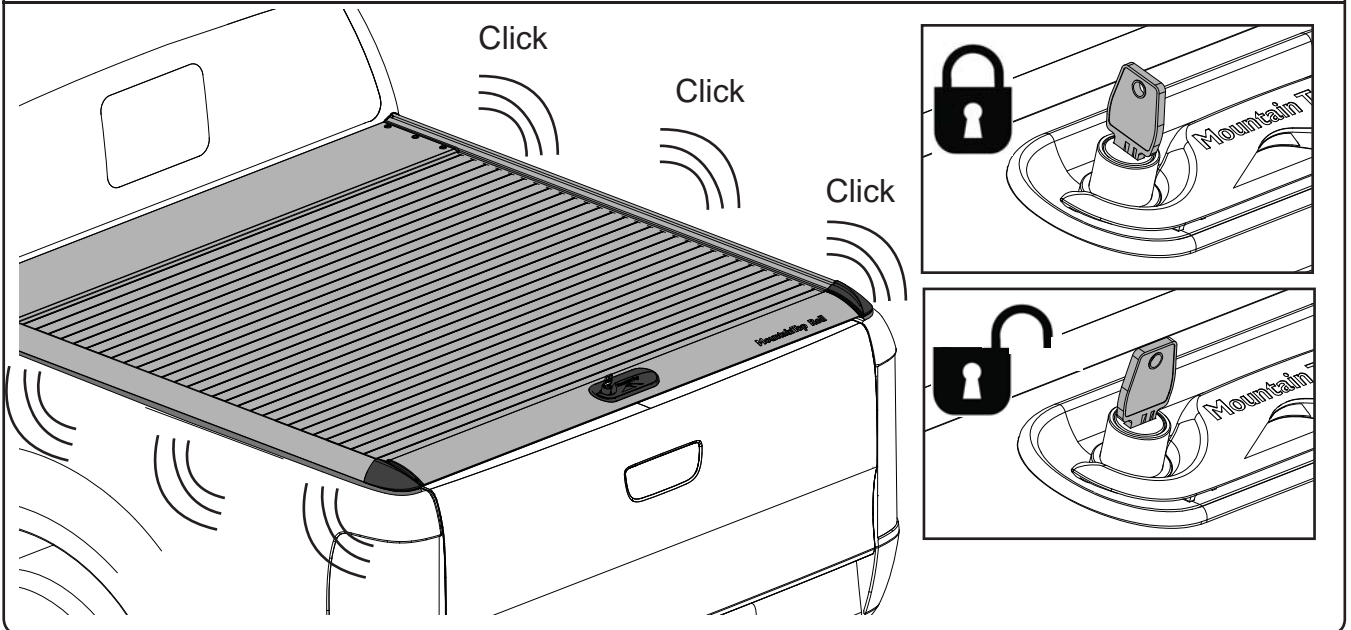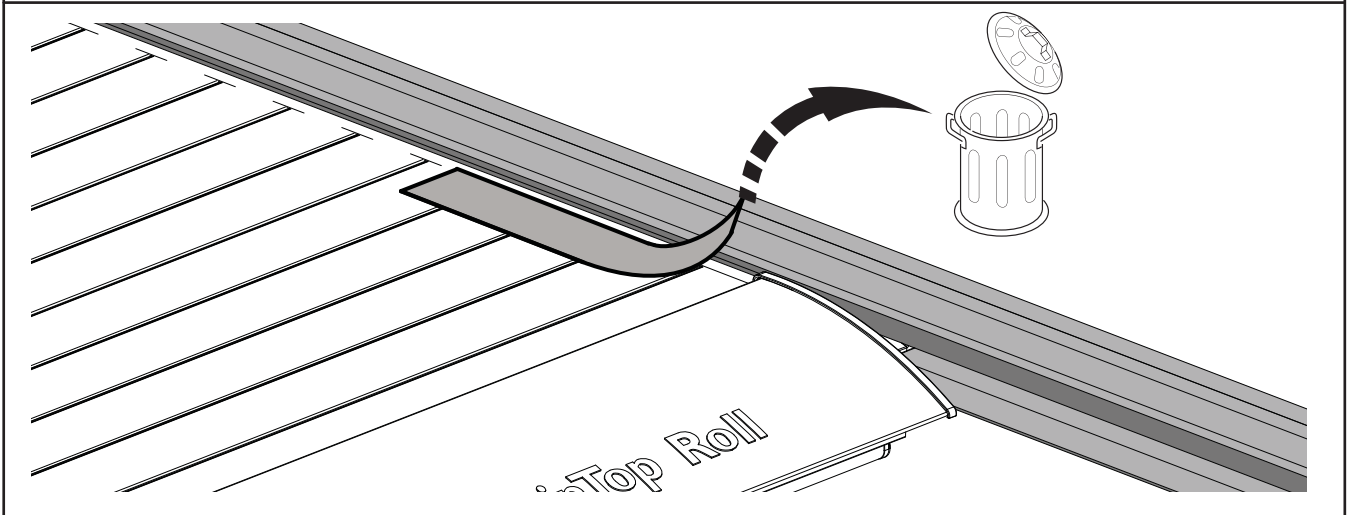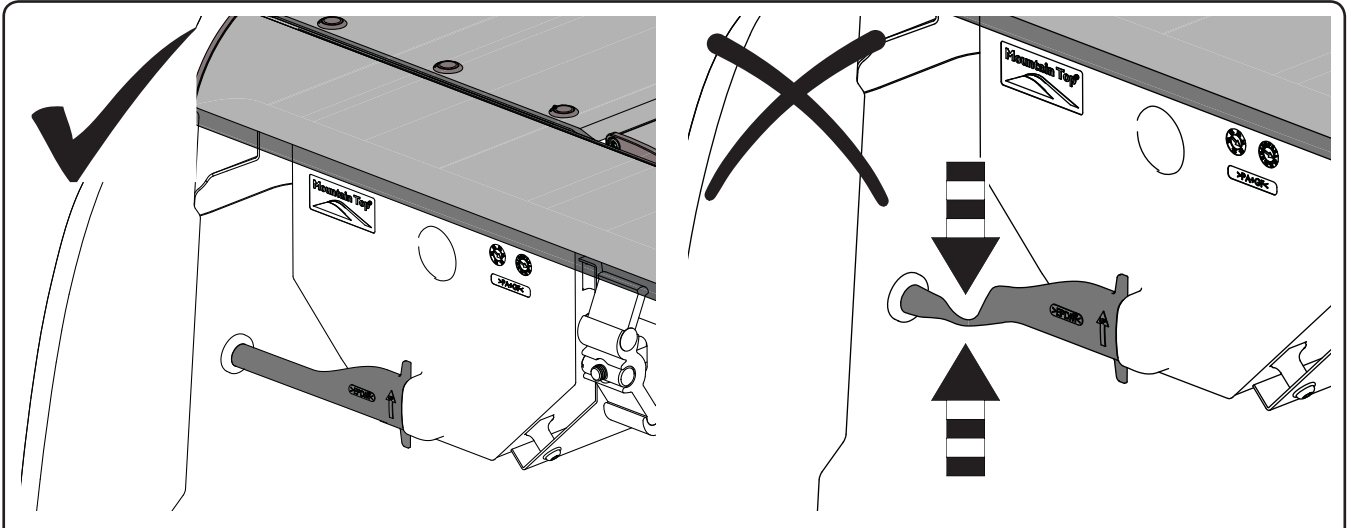



Mountain Top Roll  
Installation Instructions

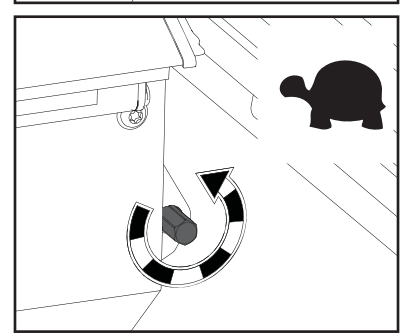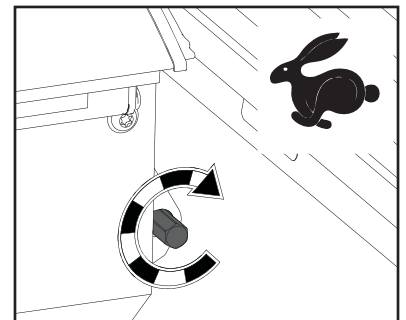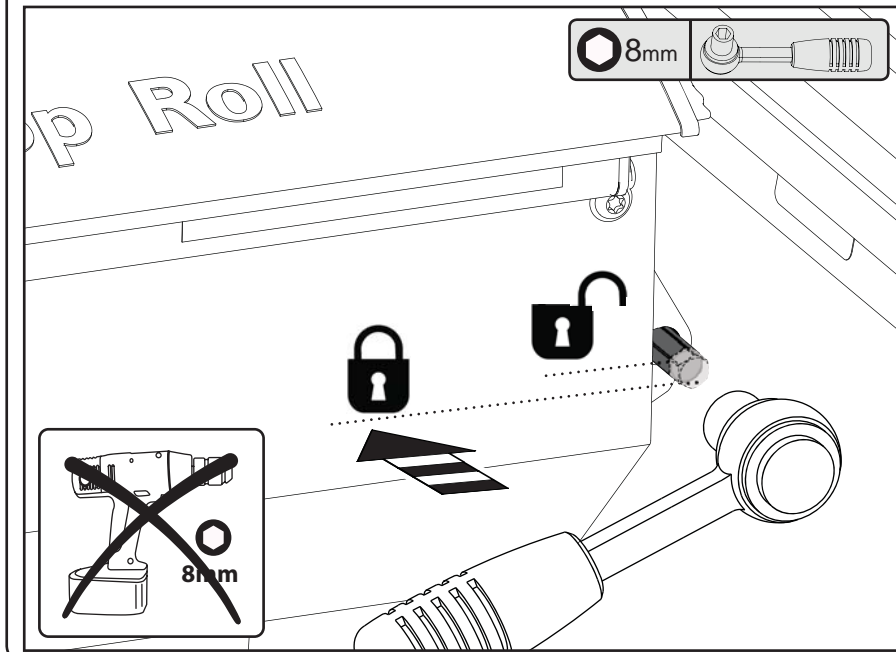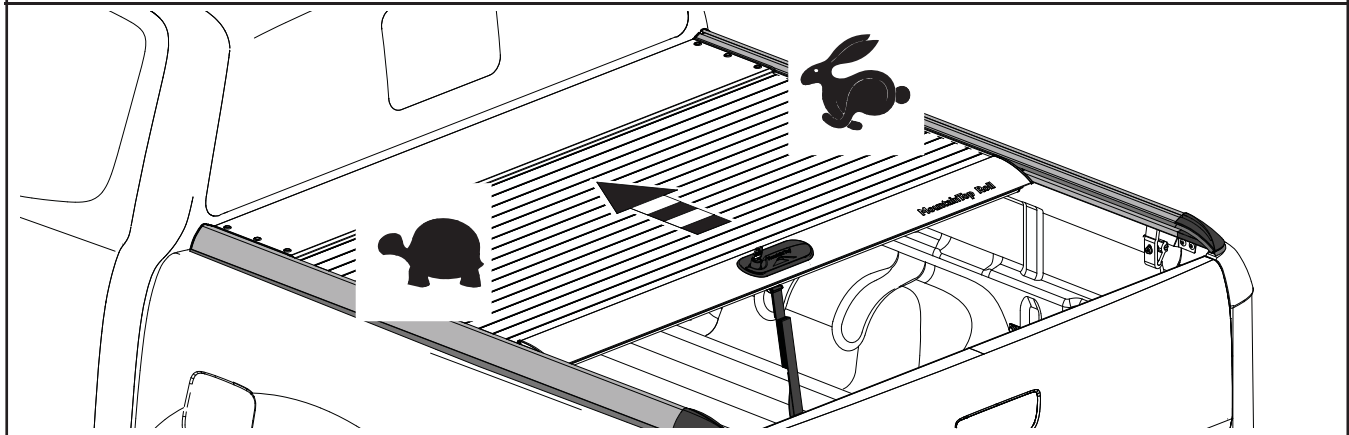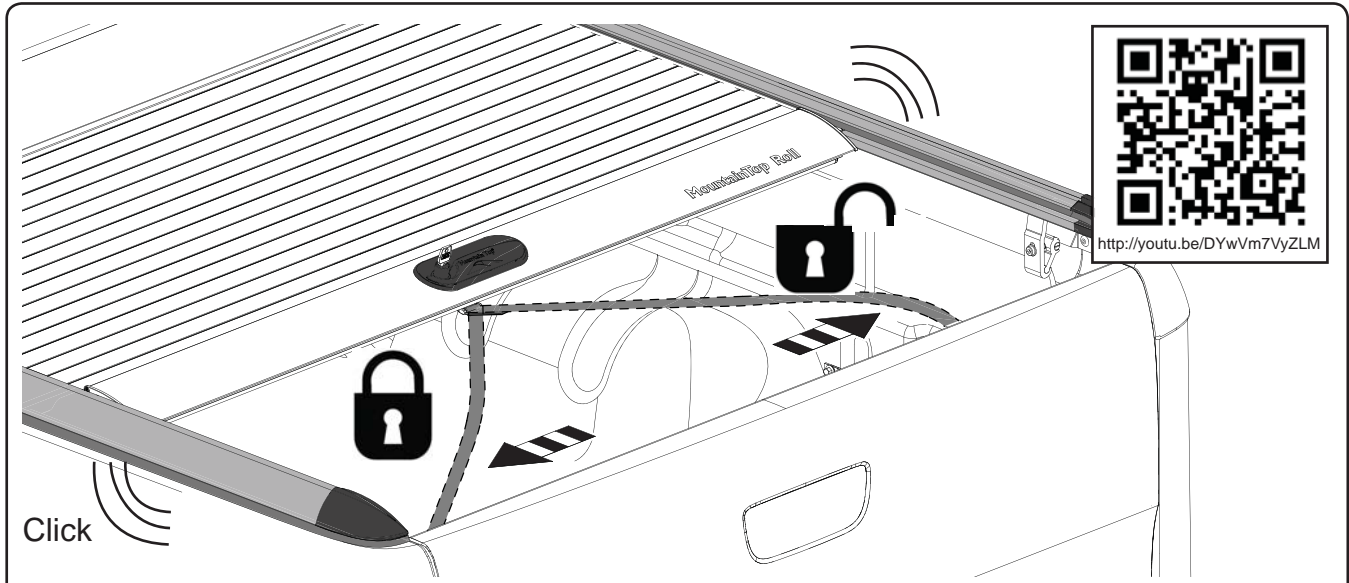

Mountain Top Roll  
Installation Instructions

