

Recommendations:

1 - Select a flat location to park the vehicle with enough room beside the car to set up the Sunseeker Awning.

2 - Set up Sunseeker as per the instructions associated with it.

3 - Check ground is free from debris that could damage the floor of the base tent. Now follow the instructions for the Base tent setup.

Note: You cannot move your vehicle once the Sunseeker and Base Tent are set up. A stand alone kit containing poles, pegs and ropes can be purchase for tent setup without the Sunseeker Awning.

Care Instructions:

To remove marks, use a soft brush or sponge with fresh water and a mild detergent only. Rinse with a fresh clean water. Allow to dry throughly before packing away. Never pack away damp, dirty or wet.

Materials: Tent - Polyester 65%, Cotton 25%. Base - PVC 350grams.

Note for Dealers and Fitters:

It is your responsibility to ensure this fitting instruction is given to the end user or client

 Rhino-Rack


 3 Pike Street, Rydalmere,


 NSW 2116, Australia.
 Document No: R653


 (Ph) (02) 9638 4744
 Prepared By: Kayle Everett
 Issue No: 01


 (Fax) (02) 9638 4822
 Authorised By: Chris Murty
 Issue Date: 16/03/2015

 These instructions remain the property of Rhino-Rack Australia Pty Ltd and may not be used or charged for any other purpose than intended.

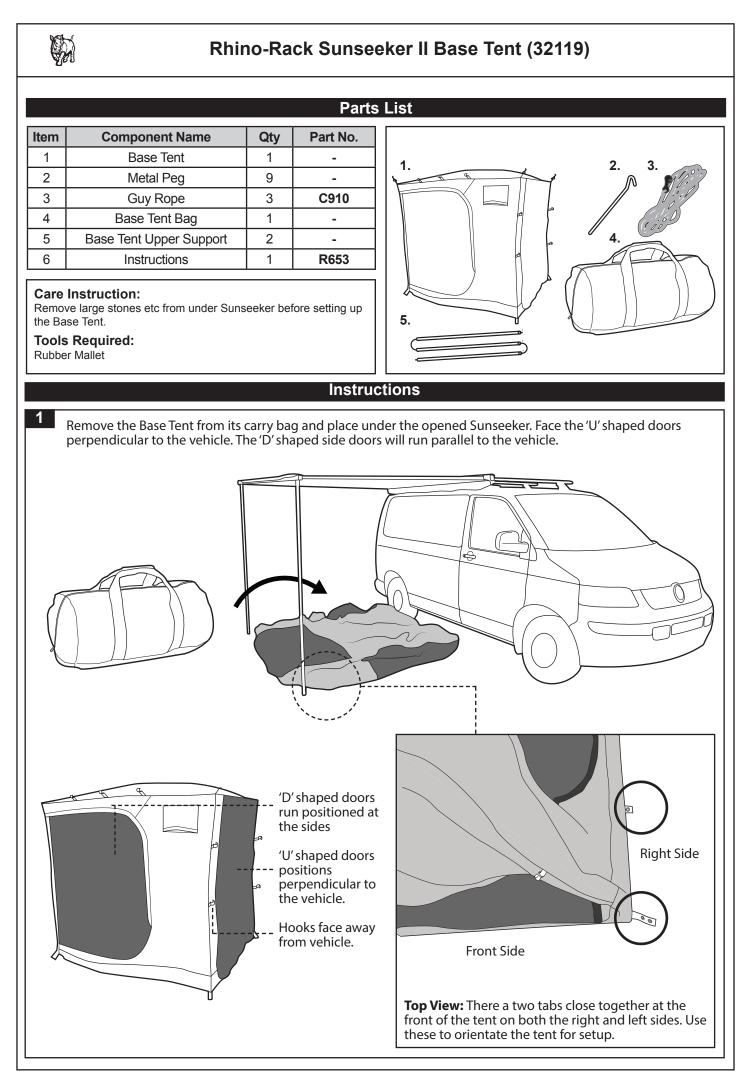

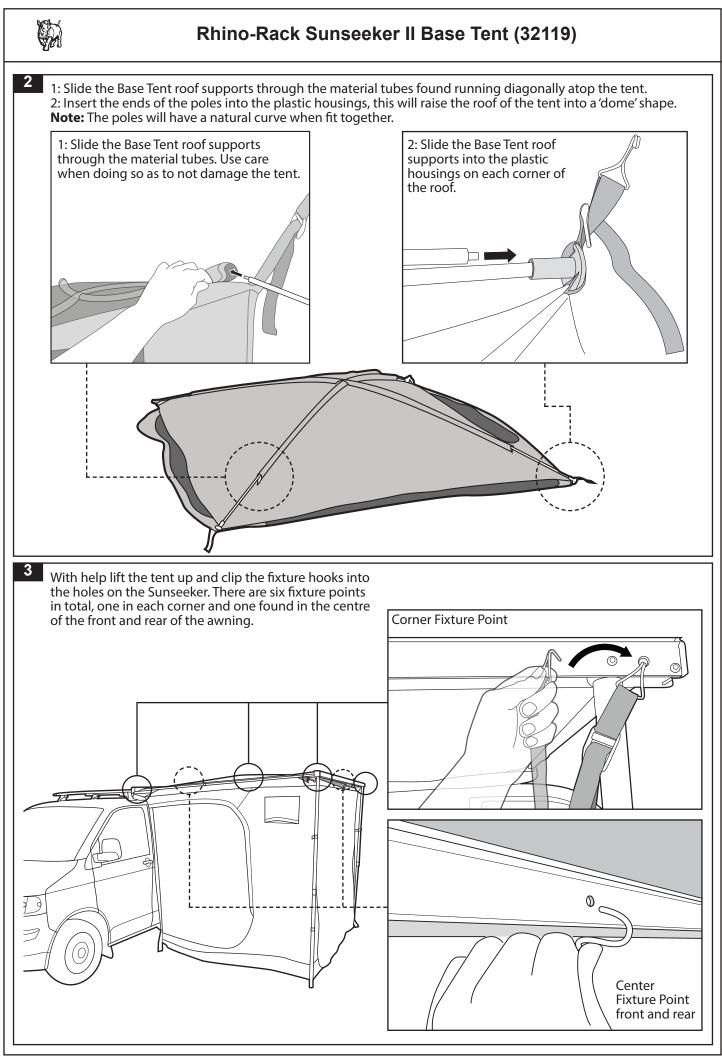

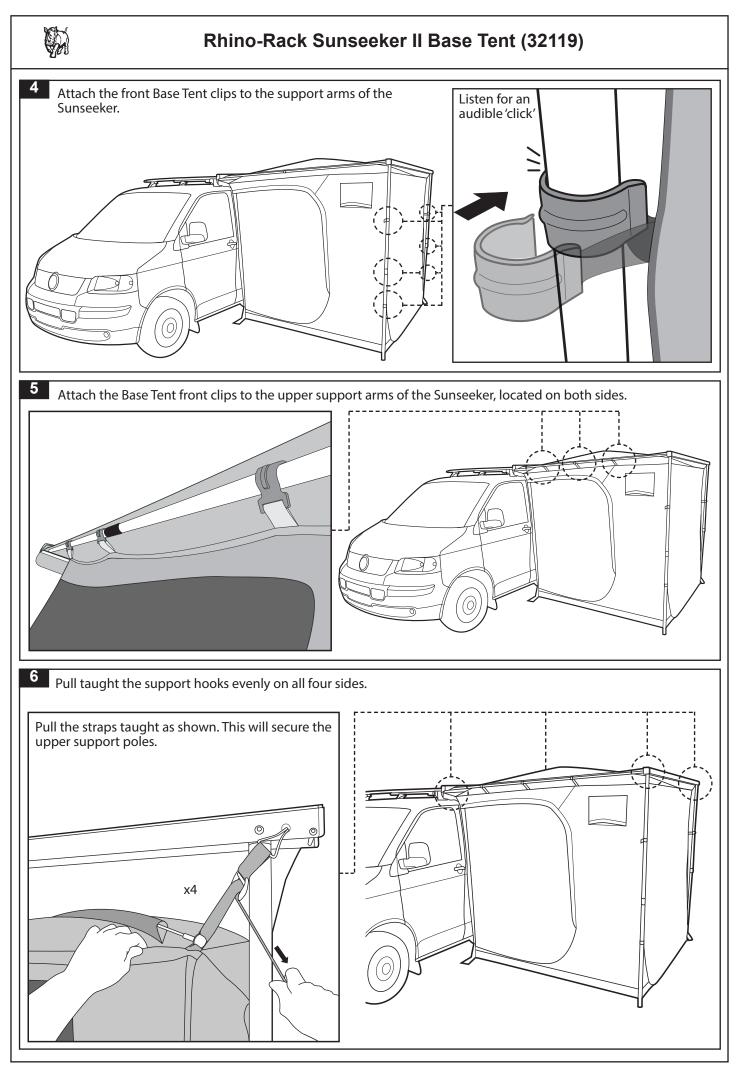

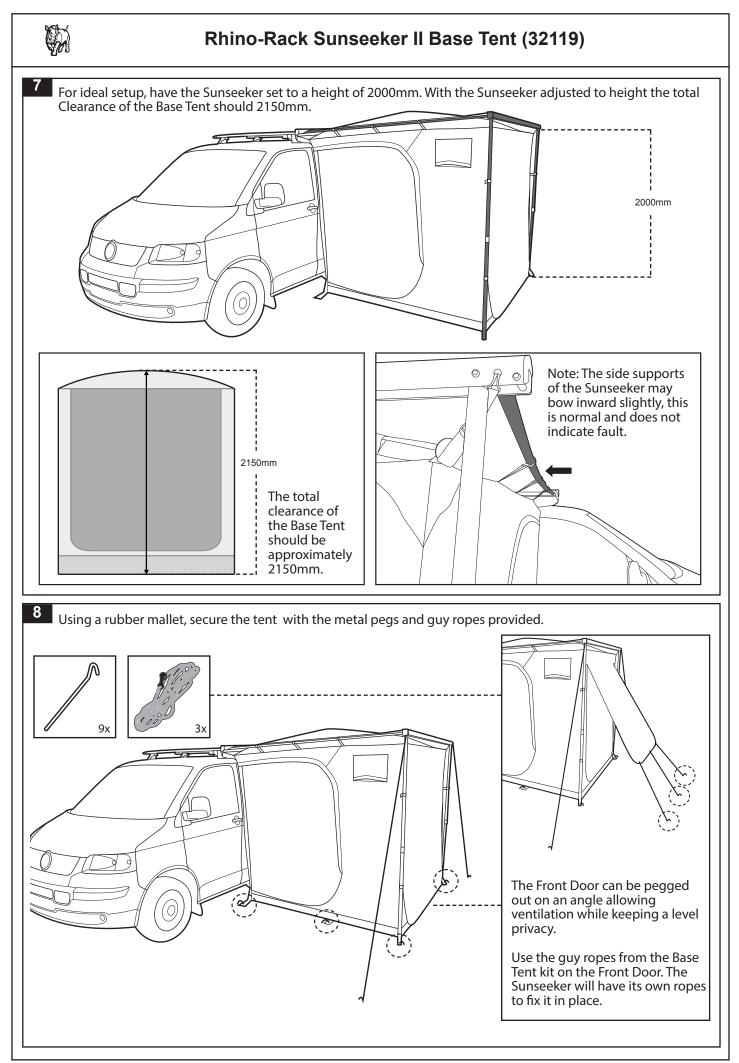



r

